



# Washer dryer

#### WDU8H542SN

[en]

User manual and installation instructions

# Futher information and explanations are available online:



# **Table of contents**

1.1 1.2 1.3 1.4 1.5	afety	. 4
2 P	reventing material damage	11
3 E	nvironmental protection and	4.
3.1 3.2	Disposing of packaging	12 12
	nstallation and connection	
4.2 4.3 4.4 4.5 4.6 4.7	Unpacking the appliance	13 14 15 16
5.1 5.2 5.3	amiliarising yourself with our appliance	18 18 19

6 Before using for the first time 6.1 Starting an empty washing	20
cycle	
7 Display	21
8 Buttons	23
9 Dryness level 9.1 Changing the dryness level	
10 Programmes	27
11 Accessories	31
<b>12 Laundry</b> 12.1 Preparing the laundry	
	JI
13 Detergents and care products	32
14 Basic operation	32
14.1 Switching on the appliance	32
<ul><li>14.2 Setting a programme</li><li>14.3 Adjusting the programme</li></ul>	32
settings	32
14.4 Saving the programme set-	20
tings14.5 Loading laundry	
14.6 Inserting the measuring aid	00
for liquid detergent	33
14.7 Use the measuring aid for liquid detergent	33
14.8 Adding detergent and care	
product	
14.9 Starting the programme	
14.10 Soaking laundry	
14.11 Adding laundry	34
14.12 Cancelling the washing	25
programme	JO

14.14	3 Cancelling the drying programme	. 35
	hildproof lockActivating the childproof	
15.2	lock  Deactivating the childproof lock	
16 H	ome Connect	
16.1	Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function Connecting the appliance to a WLAN home network	
400	(Wi-Fi) without WPS function	. 37
	Connecting the appliance to the Home Connect app Activating Wi-Fi on the ap-	. 37
10.4	pliance	. 38
	Deactivating Wi-Fi on the appliance	. 38
	network settings	
	Remote start	
	Data protection	
<b>17 B</b> 17.1	asic settings  Overview of the basic settings	
17.2	Changing the basic set- tings	
	leaning and servicing	
	Cleaning the detergent	
18.3	drawerCleaning the drain pump	
	roubleshooting Emergency release	

20 Transportation, storage and disposal	55
20.1 Removing the appliance	. 55 . 55 . 55
21 Customer Service	
22 Consumption values	. 57
23 Technical data	. 58
24 Declaration of Conformity	. 58



# 1 Safety

Observe the following safety instructions.

#### 1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

#### 1.2 Intended use

Only use this appliance:

- For washing machine-washable fabrics and hand-washable wool in accordance with the care label.
- With tap water and commercially available detergents and care products suitable for washing machines.
- For drying and freshening up fabrics that are washed with water and suitable for dryers.
- In private households and in enclosed spaces in a domestic environment.
- Up to an altitude of max. 4000 m above sea level.

# 1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

#### 1.4 Safe installation

Take note of the safety instructions when installing the appliance.

# 

Incorrect installation is dangerous.

- ► Connect and operate the appliance only in accordance with the specifications on the rating plate.
- Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ► The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ▶ When using a residual current circuit breaker, only use a type with the mark.
- ► Never equip the appliance with an external switching device, e.g. a timer or remote control.
- Never connect the appliance to a circuit that is regularly switched on and off by the energy supplier.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the installation regulations.
- ► When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- Never let the power cord come into contact with hot appliance parts or heat sources.
- ► Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

# **↑** WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- Only use adapters and power cords approved by the manufacturer.

#### en Safety

▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

# **⚠** WARNING – Risk of injury!

The high weight of the appliance may result in injury when lifted.

▶ Do not lift the appliance on your own.

# 

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ► Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

# **△** CAUTION – Risk of injury!

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
- ► Align the appliance using the appliance feet and a spirit level. If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
- ► Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

▶ Do not move the appliance by holding onto protruding parts.

# **△** CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- ▶ Do not touch the sharp edges on the appliance.
- Wear protective gloves when installing and transporting the appliance.

## 1.5 Safe use

# **△** WARNING – Risk of electric shock!

If the appliance or the power cord is damaged, this is dangerous.

- ► Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.

- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the water tap.
- ► Call customer services. → Page 56

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ► Never expose the appliance to intense heat or humidity.
- ► Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

# MARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

# **⚠** WARNING – Risk of suffocation!

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- ► Do not let children play with small parts.

# **⚠** WARNING – Risk of explosion!

If there is coal dust or flour in the air around the appliance, this may cause an explosion.

► Keep the area around the appliance clean during operation.

# **⚠** WARNING – Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

- ▶ If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

# **⚠** WARNING – Risk of explosion!

Highly flammable objects such as lighters or matches may ignite during the drying process.

Remove all highly flammable objects from any pockets in your laundry before the drying process.

Unwashed laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite when drying is in progress.

- ▶ Do not place laundry in this appliance to be dried if the laundry has not been washed first.
- ► Rinse the laundry thoroughly with warm water and detergent before drying it in the machine.
- ▶ Do not use the appliance if industrial chemicals have been used to clean the laundry beforehand.

Laundry that has been pretreated with cleaning agents that contain solvents may cause an explosion in the appliance.

► Rinse pretreated laundry thoroughly with water before washing.

## 

If drying is interrupted early, the laundry is not cooled sufficiently and may ignite.

- ▶ Do not interrupt the drying programme early.
- ► If drying is interrupted early, remove the laundry immediately and spread it out.

# **△** CAUTION – Risk of injury!

The covering plate may break if you stand on or climb onto the appliance.

▶ Do not stand on or climb onto the appliance.

The appliance may tip over if you sit on or lean against the open door.

- ▶ Do not sit on or lean against the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

Wait for the drum to come to a complete stop before reaching inside.

# **⚠** CAUTION – Risk of scalding!

When you wash at high temperatures, the detergent solution gets hot.

▶ Do not touch the hot detergent solution.

# 

If the detergent drawer is opened, detergent and care products may spray out from the appliance. Contact with eyes or skin may cause irritation.

- Rinse eyes and/or skin thoroughly with clean water if they come into contact with detergents or care products.
- ▶ If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

# 1.6 Safe cleaning and maintenance

Take note of the safety instructions when cleaning and performing maintenance work on the appliance.

# **△** WARNING – Risk of electric shock!

Incorrect repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

An ingress of moisture can cause an electric shock.

► Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

# **△** WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

Only use the manufacturer's original spare parts and original accessories.

# **⚠** WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

► Do not use cleaning agents that contain solvents.

# 2 Preventing material damage

Follow these instructions to avoid material damage and damage to the appliance.

#### **ATTENTION!**

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.

Follow the dosage recommendations from the manufacturer.

Exceeding the maximum load capacity impairs the function of the appliance.

- Observe the maximum load capacity for each programme and do not exceed it.
- → "Programmes", Page 27 Foam and foam rubber may deform or melt during the drying process.
- Do not dry laundry that contains foam or foam rubber.

The appliance is secured for transportation using transit bolts. Transit bolts which have not been removed may result in material damage and damage to the appliance.

- Before starting up the appliance, remove the transit bolts completely and keep them in a safe place.
- Before transport, fit the transit bolts fully in order to prevent damage in transit.

Material damage may be caused if the water inlet hose is connected incorrectly.

- Tighten the screw connections on the water inlet until they are handtight.
- Ideally, connect the water inlet hose directly to the water tap, without any additional connecting elements such as adapters, extensions, valves or similar.

- Make sure that the valve housing for the water inlet hose does not come into contact with its surroundings and is not subjected to any external forces.
- Ensure that the inner diameter of the water tap is at least 17 mm.
- Make sure that the length of the thread on the connection to the water tap is at least 10 mm.

If the water pressure is too high or too low, the appliance may not be able to operate properly.

- ► Ensure that the water pressure in the water supply system is at least 100 kPa (1 bar) and max. 1000 kPa (10 bar).
- If the water pressure exceeds the maximum value specified, a pressure-reducing valve must be installed between the drinking water connection and the hose set of the appliance.
- Do not connect the appliance to the mixer tap of an unpressurised hot-water boiler.

Modified or damaged water hoses may result in material damage and damage to the appliance.

- Never kink, crush, modify or cut through water hoses.
- Only use the water hoses supplied with the appliance or genuine spare hoses.
- Never re-use water hoses that have been used before.

Operating the appliance using water that is dirty or too hot may lead to material damage and damage to the appliance.

 Only operate the appliance with cold mains water.

Unsuitable cleaning products may damage the surfaces of the appliance.

 Do not use harsh or abrasive detergents.

- ▶ Do not use cleaning products with a high alcohol content.
- Do not use hard scouring pads or cleaning sponges.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

# 3 Environmental protection and saving energy

# 3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

### 3.2 Save energy and conserve resources

If you follow these instructions, your appliance will use less electricity and less water.

Choose programmes with low temperatures and longer wash times and use maximum load capacity.

 Energy consumption and water consumption is most efficient.

detergent based on the laundry's degree of soiling.

For light to normal soiling, a smaller amount of detergent is sufficient. Observe the dosage recommendation from the detergent manufacturer.

Reduce the washing temperature for lightly and normally soiled laundry.

At lower temperatures, the appliance consumes less energy. For light to normal soiling, lower temperatures than indicated on the care label are also sufficient.

Set the maximum spin speed if you want to dry the laundry in the appliance afterwards.

✓ The drier the laundry, the shorter the programme duration when drying which, in turn, reduces energy consumption. A higher spin speed reduces the residual moisture in the laundry and increases the volume of the spin noise.

Wash the laundry without prewash.

 Washing with prewash increases the programme duration and increases energy and water consumption.

The appliance has a continuous automatic load adjustment function.

Depending on the type of fabric and load capacity, the continuous automatic load adjustment function optimally adjusts the water consumption and programme duration.

# 3.3 Energy saving mode

If you do not use the appliance for an extended period, it automatically switches to energy-saving mode. Energy-saving mode ends when you use the appliance again.

# 4 Installation and connection

# 4.1 Unpacking the appliance

#### **ATTENTION!**

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.

- ► Remove these objects, along with all supplied accessories, from the drum before starting the appliance.
- 1. Remove any packaging and protective covers completely from the appliance.
  - → "Disposing of packaging", Page 12
- 2. Check the appliance for visible damage.
- 3. Open the appliance door. → "Basic operation", Page 32
- 4. Remove any accessories from the drum.
- 5. Close the appliance door.

# 4.2 Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

#### **ATTENTION!**

If the appliance is operated with incomplete or defective accessories, the appliance may not be able to operate properly, or this may result in material damage or damage to the appliance.

▶ Do not operate the appliance with incomplete or defective accessories.

- Replace the accessories in guestion before operating the appliance.
  - → "Accessories", Page 31

**Note:** The appliance has been tested at the factory to check it is in working order. As a result, water stains may remain in the appliance. These marks will disappear after the first wash cycle.

The delivery consists of the following:

- Washer dryer
- Accompanying documents
- Transit bolts → "Removing the transit bolts", Page 14
- Cover caps
- Elbow for securing the water outlet hose

# 4.3 Requirements for the installation location

### . WARNING Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

▶ Do not operate the appliance without a cover cap.

# ⚠ WARNING Risk of injury!

When using the appliance on a base, the appliance may tip over.

Always secure the feet of the appliance to a base using the manufacturer's fixing brackets → Page 31 before using the appliance for the first time.

#### **ATTENTION!**

If residual water in the appliance freezes, this may cause damage to the appliance.

▶ Do not install or operate this appliance anywhere that is liable to experience frost or outdoors.

If the appliance is tilted at an angle greater than 40°, residual water may leak out of the appliance and cause material damage.

- ► Tilt the appliance carefully.
- Transport the appliance in an upright position.

 
# Installation location Base Secure the approximation



Secure the appliance with fixing brackets


→ Page 31.

# Wooden joist floor




Place the appliance on a water-resistant wooden board (minimum thickness of 30 mm) which is screwed tightly to the floor.

#### Kitchen unit

 

Only install the appliance underneath a continuous worktop that is securely connected to adjacent cabinets. Required niche width: 60 cm.

### Against a wall

 


Do not trap the hoses and power cord between the wall and the appliance.

# 4.4 Removing the transit bolts


The appliance is secured for transportation using transit bolts on the rear of the appliance.

**Note:** Keep the transit bolt screws and the sleeves in a safe place for future transport  $\rightarrow$  *Page 55*.


1. Pull the hoses out of the holders.

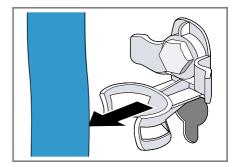


2 Unscrew ① and remove ② all screws for the 4 transit bolts with a WAF 13 wrench.

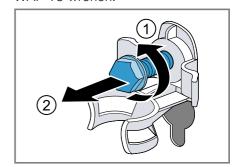


3. Remove the power cable from the holder.

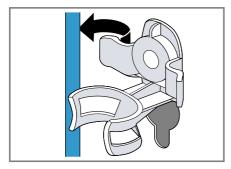


4. Remove the 4 sleeves.

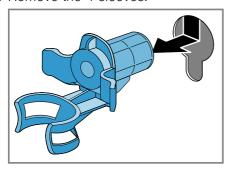

5. Put on the 4 cover caps.

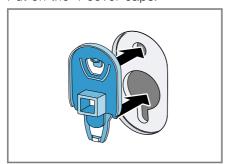

6. Press down on the 4 cover caps.

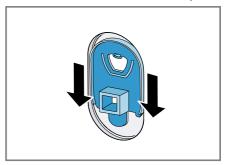


# 4.5 Connecting the appliance Connecting the water inlet hose

# ⚠ WARNING Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

- ► Do not immerse the electrical AquaStop valve in water.
- 1. Connect the water inlet hose to a tap (26.4 mm = 3/4").

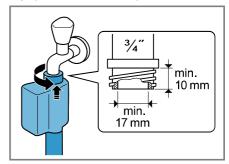

2. Open the water tap carefully and check that the connection points are tight.

## Water outlet connection types

This information is intended to help you to connect this appliance to the water outlet.

#### **ATTENTION!**

When draining, the water outlet hose is subject to water pressure and may come loose from the installed connection point.

 Secure the water outlet hose against unintentional loosening.

**Note:** Observe the draining heights. The draining heights are: minimum: 60 cm, maximum: 100 cm

#### Siphon



Secure the connection point with a (24–40 mm) hose clamp.

 
#### Sink



Fix and secure the water outlet hose with an elbow

→ Page 31.

# Plastic pipe with rubber sleeve




Fix and secure the water outlet hose with an elbow

→ Page 31.


# 4.6 Aligning the appliance

In order to reduce noise and vibration and to prevent the appliance from moving, align the appliance correctly.

 Loosen the lock nuts using a WAF 17 wrench by turning it in a clockwise direction.

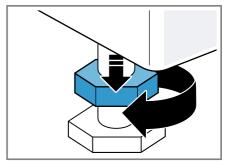


2 To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

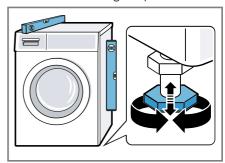

All appliance feet must stand firmly on the ground.

3. Screw the lock nuts tightly against the housing using a WAF 17 wrench.

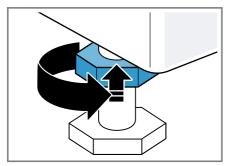

In doing so, hold the foot tight and do not adjust its height.

# 4.7 Connecting the appliance to the electricity supply


Note: Your electrical domestic installation for this appliance must comply with the local legal provisions and safety regulations, and should include a residual current circuitbreaker.

- 1. Insert the mains plug of the appliance's power cable in a socket nearby.
  - The connection details of the appliance can be found under Technical data → Page 58.
- 2. Check the mains plug is inserted properly.

# 5 Familiarising yourself with your appliance

# 5.1 Appliance

You can find an overview of the parts of your appliance here.

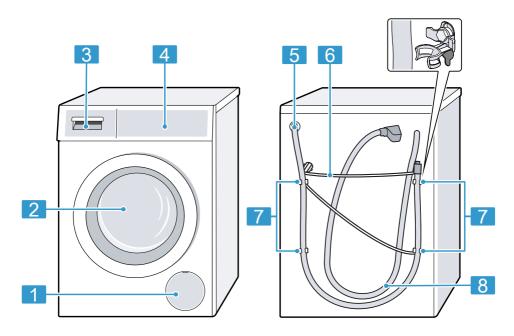


On certain models, specific details such as the colour and shape may differ from those pictured.

- Maintenance flap for the drain pump → Page 42 Door Detergent drawer → Page 18 Control panel → Page 19 Water outlet hose → Page 15 Power cord → Page 17 Transit bolts → Page 14
- Water inlet hose → Page 15

## 5.2 Detergent drawer

Note: Observe the manufacturer's instructions on the use and dosage of the detergent and care product and the information in the programme descriptions.

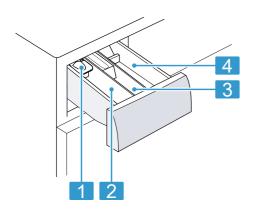


- Measuring aid for liquid detergent

  → "Inserting the measuring aid for liquid detergent",
  Page 33
- Dispenser II: detergent for the main wash
- 3 Compartment &: Fabric softener
- Compartment I: Detergent for prewash

# 5.3 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

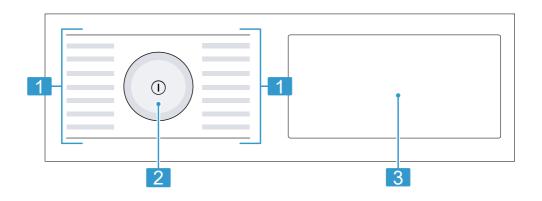

- 1 Programmes → Page 27
- Programme selector

  → Page 32
- 3 Buttons and display

# 5.4 Operating logic

Some areas of the display respond to touch. You can activate settings by pressing the buttons. The activated settings are highlighted brightly on the display. You can change or deac-

 
#### en first time


tivate the activated settings by repeatedly pressing on the relevant buttons on the display.

#### **ATTENTION!**

Pressing on the display with force may cause damage.

- Do not apply heavy pressure on the display.
- Do not press on the display using pointed or sharp objects.



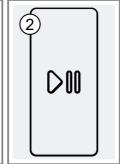

# 6 Before using for the first time


Prepare the appliance for use.

# 6.1 Starting an empty washing cycle

Your appliance was inspected thoroughly before leaving the factory. To remove any residual water, run the first wash cycle without any laundry.

- 1. Press ①.
  - The switch-on process takes a few seconds.
- **2.** Set the **Trumrengöring** programme.
- 3. Close the door.
- 4. Pull out the detergent drawer.

5. Pour washing powder into compartment II.

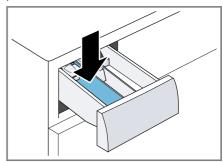


To prevent foaming, use only half of the amount of detergent recommended by the detergent manufacturer for light soiling. Do not use detergent suitable for woollens or delicates.

- 6. Push in the detergent drawer.
- **7.** Press DII to start the programme.
- The display shows the remaining programme duration.
- ✓ After the programme has ended, the display shows: End.
- 8. Start the first wash cycle or press ① to switch off the appliance.
  - → "Basic operation", Page 32

# 7 Display

The display shows the current settings, options or relevant information.

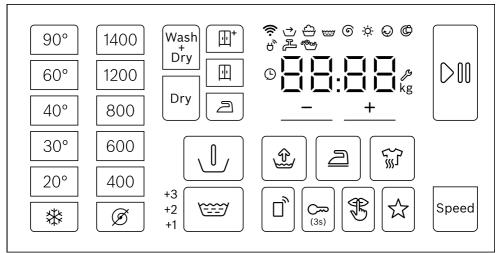

Example: Display

Display	Designation	Description
0:40 1	Programme duration/programme time remaining	Approximate expected programme duration or programme time remaining.
(£) 8h 1	"Ready in" time	→ "Buttons", Page 23
6,0 kg <sup>1</sup>	Recommended load	The maximum load capacity for the selected programme in kg.
<u>→</u> ,	Pretreatment	Programme status
<u></u>	Wash	Programme status
	Rinse	Programme status
<u>©</u>	Spin	Programme status
End	End of pro- gramme	Programme status
<del>*</del>	Drying	Programme status
<b></b>	Anti-crease	Programme status
+1 +2 +3	Additional rinse	Additional rinse cycles are activated.  → "Buttons", Page 23
<sup>1</sup> Example		

## en Display

Display	Designation	Description
<b></b>	Wi-Fi	<ul> <li>Lights up: The appliance is connected to your home network.</li> <li>Flashes: The appliance is trying to connect to your home network.</li> </ul>
		→ "Home Connect ", Page 36
<b>භ</b> ී	Energy manager	The appliance is connected to the smart energy system (energy manager).
#800	Foam detection system	The appliance has detected too much foam.
©	Door	<ul> <li>Lights up: The door is locked and cannot be opened.</li> <li>Off: The door is unlocked and can be opened.</li> </ul>
<del>足</del>	Tap	<ul><li>No water pressure.</li><li>The water pressure is too low.</li></ul>
E:35 / -10 <sup>1</sup>	Error	Error code, error display, signal.
<sup>1</sup> Example		

# 8 Buttons

Button	Selection	Description
① (mains switch)	<ul><li>Switch on</li><li>Switch off</li></ul>	Switch the appliance on or off.
♣ - 90° (Temperature)	♣ - 90 °C	Adjust the temperature in °C.
Ø - 1400 (Spinspeed)	Ø - 1400 rpm	Adjust the spin speed or deactivate the spin cycle. If $\mathscr{D}$ is selected, the water is drained and the spin cycle is deactivated. The laundry stays wet inside the drum.
<b>▷</b> 00	<ul><li>Start</li><li>Cancel</li><li>Pause</li></ul>	Start, cancel or pause the programme.
+ / - (Ready In)	Up to 24 hours	Set the programme end. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.  Note: Use the buttons to set the setting values.
\$	Multiple selection	→ "Basic settings", Page 40
Speed	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate a shorter programme duration.  Note: Energy consumption increases. The washing result is not affected by this.
	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate prewash, e.g. for washing heavily soiled laundry.
(Rinse plus)	■ +1 ■ +2 ■ +3	Activate or deactivate up to three additional rinse cycles. Recommended for particularly sensitive skin or in regions with very soft water.
	<ul><li>Activate</li><li>Deactivate</li></ul>	Wash with more water. Recommended for particularly sensitive skin and for treating laundry more gently.

Button	Selection	Description
a (Easy Iron)	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate the reduced creasing programme. In order to reduce creasing in the laundry, the spin cycle and the spin speed are adapted. The laundry is damp enough after washing that it needs to be hung out on a washing line.
<b>C</b> (3s)	<ul><li>Activate</li><li>Deactivate</li></ul>	→ "Childproof lock", Page 35
\$	<ul><li>Saving</li><li>Setting</li></ul>	Press the button for approx. 3 seconds to save your customised program settings.  → "Saving the programme settings", Page 32  If you briefly press the button, you can set customised program settings for your program.
∜ (Silent wash)	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate Silent Wash, e.g. for washing during the night. The audible signal at the end of programme is deactivated and the final spin speed is reduced.
위 (Hygienic care)	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate gentle pretreatment of dry laundry with hot air up to 65 °C for increased hygiene demands.  After the fabrics have been pretreated with hot air, they are washed at low temperatures.  Note: The drum lighting remains active for up to approx. 10 minutes after the programme starts.
Dry	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate drying without washing beforehand.
Wash+Dry	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate washing with subsequent drying.
기(Iron Dry)	<ul><li>Activate</li><li>Deactivate</li></ul>	The dryness level defines how damp or dry the laundry is after the programme ends.
① (Cupboard Dry)	<ul><li>Activate</li><li>Deactivate</li></ul>	The dryness level defines how damp or dry the laundry is after the programme ends.

Button	Selection	Description
⊞ <sup>+</sup> (Cupboard Dry+)	<ul><li>Activate</li><li>Deactivate</li></ul>	The dryness level defines how damp or dry the laundry is after the programme ends.
☐ (Remote start)	<ul><li>Activate</li><li>Deactivate</li><li>Open the Home Connect menu</li></ul>	→ "Remote start", Page 38

# 9 Dryness level

In some programmes, a dryness level is predefined. The dryness level defines how dry or damp your laundry is after the programme ends.

<b>Dryness level</b>	Laundry	Drying result
···	Multi-layered, thick laundry that does not dry readily.	The laundry is dry.
oxdot	Normal, single-layered laundry.	The laundry is dry.
	Normal, single-layered laundry	The laundry is still a little damp after drying.  To prevent creasing, iron the laundry immediately after drying or hang up the laundry while it is still damp.

## 9.1 Changing the dryness level

For some programmes, you can change the dryness level so that your laundry will be drier or more damp.

- 1. Set a washing and drying programme or a drying programme. → "Programmes", Page 27
- ▼ The display shows the specified dryness level.
- 2. Press III or 2.

# 10 Programmes

Note: The laundry's care labels provide you with additional information on programme selection.

Programme	Description	Max. load (kg) Wash	Max. load (kg) Dry- ing
Bomull (Cottons)	Wash hard-wearing items made from cotton, linen or blended fabrics. Also suitable as a short programme for normally soiled laundry when you activate Speed. Programme setting:  Max. 90 °C  Max. 1400 rpm	10,0 5,0 <sup>1</sup>	6,0
Eco 40-60	Wash items made from cotton, linen or blended fabrics.  Note: Fabrics which can be washed from 40 °C wy up to 60 °C wy as per the care symbol can be washed together.  The washing performance corresponds to the best possible washing performance class according to the legal requirements.  For this programme, the washing temperature is automatically adjusted depending on the load size, in order to achieve the best possible energy efficiency with the best possible washing result. You cannot change the washing temperature.  Programme setting:  Note: The temperature cannot be adjusted in this programme and is set automatically.  Max °C  Max. 1400 rpm	10,0	6,0
Syntet (Easy Care)	Wash items made from synthetic or blended fabrics. Programme setting:  Max. 60 °C	4,0	2,5
<ul><li>Speed active</li><li>Drying not p</li><li>Washing not</li></ul>	ossible		

### en Programmes

Programme	Description	Max. load (kg) Wash	Max. load (kg) Dry- ing
	■ Max. 1400 rpm		
Mix	Wash items made from cotton, linen, or synthetic or blended fabrics. Suitable for lightly soiled laundry. Programme setting:  Max. 60 °C  Max. 1400 rpm	4,0	2,5
Fintvätt/Silke (Delicate/Silk)	Wash delicate, washable items made from silk, viscose and synthetic fabrics. Use a detergent that is suitable for delicates or silk.  Note: Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag.  Programme setting:  Max. 40 °C  Max. 800 rpm	2,0	_2
	Hand- or machine-washable items that are made from wool or contain wool.  To prevent the laundry from shrinking, the drum moves the items very gently with long pauses.  Use a detergent that is suitable for wool.  Programme setting:  Max. 40 °C  Max. 800 rpm	2,0	1,0
Sköljning (Rinse)	Rinse and then spin the laundry, and drain the water. Programme setting: Max. 1400 rpm	_	_
Centrif./Ur- pumpning (Spin/Drain)	Spin and drain the water. If you only want to drain the water, activate Ø. The laundry is not spun. Programme setting: Max. 1400 rpm	_	_
<ul> <li>Speed activate</li> <li>Drying not pot</li> <li>Washing not</li> </ul>	ated ossible		

Programme	Description	Max. load (kg) Wash	Max. load (kg) Dry- ing
ytterligare (App Pro- grams)	Select additional programmes directly via the Home Connect app. A description of the programmes can be found in the Home Connect app.  Note: Your appliance must be connected to your home network and registered in your Home Connect app.  → "Home Connect", Page 36	-	_
Sport	Wash sports and leisure items made from synthetic fibres, microfibre or fleece. Use a detergent that is suitable for sports items. Do not use fabric softener.  Tip: Use the Syntet programme to wash heavily soiled laundry.  Programme setting:  Max. 40 °C  Max. 800 rpm	2,0	2,0
Trum- rengöring (Drum Clean)	Cleaning and caring for the drum. Use this programme in the following cases:  Before using the appliance for the first time If you regularly wash at temperatures of 40 °C or lower  After a prolonged period of non-use	_3	_2
	Use washing powder or a detergent that contains bleach. Halve the amount of detergent to avoid foaming. Do not use fabric softener. Do not use liquid detergent or detergent that is intended for woollens or delicates.  Note: The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time.		

<sup>&</sup>lt;sup>2</sup> Drying not possible <sup>3</sup> Washing not possible

### en Programmes

Programme	Description	Max. load (kg) Wash	Max. load (kg) Dry- ing
Refresh <b>∜</b>	Reduce creases and air-based odours from suits and fabrics made of linen or wool.  Tip: Remove the laundry immediately after the programme has ended to prevent creasing.  Notes  The laundry is not dried or washed.  If you use the Refresh programme often without washing in between, this may cause odours in the appliance.	_3	1,0
MyTime	Wash items made from cotton, linen, or synthetic or blended fabrics. Short programme for items of lightly to normally soiled laundry.  Note: If you only want to dry the laundry and not wash it, press Dry.  Programme setting:  Max. 40 °C  Max. 1200 rpm	2,0	6,0
Snabb 15'/ Tvätt & Tork 60'	Wash items made from cotton, linen, or synthetic or blended fabrics. Short programme for small items of lightly soiled laundry. Programme setting:  Max. 40 °C  Max. 1200 rpm	2,0	1,0

Speed activated
 Drying not possible
 Washing not possible

## 11 Accessories

Use original accessories. These have been made especially for your appliance.

	Use	Order number
Water inlet hose extension	Extend the water inlet hose for cold water or AquaStop (approx. 2.50 m).	WMZ2381
Fixing brackets	Improves the stability of the appliance.	WMZ2200
Elbow	Secure the water outlet hose in place.	00655300
Liquid detergent insert	Measure liquid detergent.	00605740

# 12 Laundry

**Note:** You can find further information in the digital instruction manual by scanning the QR code in the table of contents or on www.boschhome.com.

## 12.1 Preparing the laundry

#### **ATTENTION!**

Objects remaining in the laundry may damage the laundry and the drum.

- Remove all items from any pockets in your laundry before using the appliance.
- To protect your appliance and the laundry, prepare the laundry beforehand.
  - Empty any pockets
  - Brush sand out of all collars and pockets
  - Close bed covers and cushion covers
  - Close all zips, Velcro fasteners, hooks and eyes

- Tie cloth belts, apron strings, etc. together or use a laundry
- Tie together longer drawstrings. and tie cords with solid endpieces in hoods or trousers
- Remove curtain hooks and lead strips or use a mesh laundry
- Use a mesh laundry bag for small items of laundry, such as children's socks
- Some stubborn or dried-in stains can be removed by washing several times
- Wash large and small items of laundry together
- Do not rub fresh stains but dab them with soapy water
- Separate items of laundry and shake them out, or observe the programme description
- Spin the laundry before drying

# 13 Detergents and care products

#### **Notes**

- You can find further information in the digital instruction manual by scanning the QR code in the table of contents or on www.boschhome.com.
- Observe the information on safety → Page 4 and preventing material damage → Page 11.

The manufacturer's instructions for use and dosage can be found on the packaging.

#### **Notes**

- Only use liquid detergents that are self-flowing
- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products that have expired or are highly congealed
- Use dyes sparingly as salt may damage stainless steel
- Do not use bleaching agents in the appliance

# 14 Basic operation

**Note:** You can find further information in the digital instruction manual by scanning the QR code in the table of contents or on www.boschhome.com.

## 14.1 Switching on the appliance

Requirement: The appliance has been correctly installed and connected.

→ "Installation and connection", Page 13

Press ① .

The switch-on process takes a few seconds.

Note: The lighting for the drum goes out automatically.

## 14.2 Setting a programme

- 1. Turn the programme selector and set the required programme.
  - → "Programmes", Page 27
- 2. If required, adjust the programme settings.
  - → "Adjusting the programme settings", Page 32

# 14.3 Adjusting the programme settings

Requirement: A programme is set. → "Setting a programme", Page 32

 Adjust the programme settings. → "Buttons". Page 23 Observe the information about operating logic → Page 19.

Note: The programme settings are not saved permanently for the proaramme.

# 14.4 Saving the programme settings

You can save your individual programme settings as favourites.

## Requirements

- A programme is set. → "Setting a programme", Page 32
- The programme settings have been adjusted.
  - → "Adjusting the programme settings", Page 32
- ▶ Press and hold ☆ for approx. 3 seconds.

Press ☆ to call up the saved programme.

Note: To overwrite the saved programme, repeat the steps above.

# 14.5 Loading laundry

Note: To prevent creasing, note the maximum load for the programmes.

→ "Programmes", Page 27


Requirement: The laundry is prepared.

- → "Laundry", Page 31
- 1. Open the door. Ensure that the drum is empty.
- **2.** Place the laundry in the drum.
- 3. Close the door. Ensure that there is no laundry trapped in the door.


# 14.6 Inserting the measuring aid for liquid detergent

If you order the measuring aid as an accessory, you must use the measurina aid.

- 1. Pull out the detergent drawer.
- 2. Press down on the insert and remove the detergent drawer.

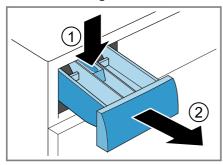

3. Insert the measuring aid.

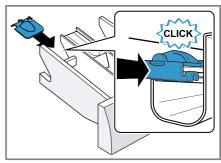


**4.** Insert the detergent drawer.


# 14.7 Use the measuring aid for liquid detergent

To add liquid detergent, you can use a measuring aid in the detergent drawer.

- **1.** Pull out the detergent drawer.
- 2. Slide the measuring aid forwards.

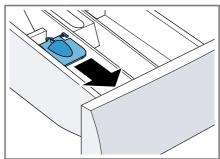

**3.** Fold the measuring aid down and click it into place.

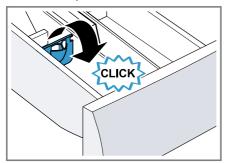

4. Push in the detergent drawer.

# 14.8 Adding detergent and care product

#### Notes

- Do not use the measuring aid for liquid detergent for gel detergents, washing powder, or if Prewash or "Ready in" time are activated.
- Observe the information about detergents and care products
   → Page 32.
- **1.** Pull out the detergent drawer.
- 2. Pour in detergent.
  - → "Detergent drawer", Page 18
- 3. If required, add the care product.
- **4.** Push in the detergent drawer.

# 14.9 Starting the programme

**Requirement:** A programme is set. → "Setting a programme", Page 32

- 1. Press DII.
- The drum rotates and load detection takes place. This can take up to 2 minutes, after which water enters the drum.
- The display shows the programme duration or the "Ready in" time.
- After the programme has ended, the display shows: End.

 If S is selected, the laundry is not spun and the water is drained after rinsing.

**Note:** If you do not remove the laundry once the programme has ended, the crease-reduction function starts after 15 minutes and takes approx. 30 minutes. The display shows **0:00** and ♥.

Press anywhere on the display to cancel the crease-reduction programme and to remove the laundry.

## 14.10 Soaking laundry

**Note:** No additional detergent is required. The washing solution is then used for washing.

- 1. Start the programme.
- 2. To pause the programme, after approx. 10 minutes, press ▷ ...
- 3. To resume the programme, after the desired soaking time, press DM

# 14.11 Adding laundry

After the programme starts, you can remove or add laundry depending on the programme status.

**Requirement:** A programme has started.

- → "Starting the programme", Page 34
- 1. Press DII.

During the washing cycle, the appliance pauses.

During the drying cycle, the appliance checks whether it is possible to add laundry.

**Note:** If you want to add laundry, follow the instructions on the display.

- → "Display", Page 22
- 2. Open the door.
- 3. Add or remove laundry.

- 4. Close the door.
- 5. Press DII.

# 14.12 Cancelling the washing programme

- 1. Press DM
- 2. Open the appliance door.

The appliance door remains locked for safety reasons if the temperature and water levels are high.

- If the temperature is high, start the **Sköljning** programme.
- If the water level is high, start the Centrif. programme or select a suitable programme for draining.
  - → "Programmes", Page 27
- 3. Remove the laundry.
  - → "Unloading the laundry". Page 35

# 14.13 Cancelling the drying programme

- 1. Press ①.
- The appliance switches off.
- 2. Switch the appliance on again.
- 3. To start the cooling process: Select the My Time + Dry programme.
- 4. Press DII.

# 14.14 Unloading the laundry

- 1. Open the door.
- 2. Remove the laundry from the drum.

# 14.15 Switching off the appliance

1. Press ①.

2. Wipe the rubber gasket dry and remove any foreign objects.



3. Leave the appliance door and detergent drawer open so that residual water can evaporate.

# 15 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

## 15.1 Activating the childproof lock

- ▶ Press and hold (3s) for approx. 3 seconds.
- The controls are locked.
- ▼ The childproof lock remains active even after the appliance has been switched off and in the event of a power failure.

# 15.2 Deactivating the childproof lock

**Requirement:** To deactivate the childproof lock, the appliance must be switched on.

3 seconds.

## 16 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

**Note:** You can find further information in the digital instruction manual by scanning the QR code in the table of contents or on www.boschhome.com.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information about this at: www.home-connect.com.

- → "Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function", Page 36
- → "Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function", Page 37

The Home Connect app guides you through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

### **Tips**

- Please consult the documents supplied by Home Connect.
- Please also follow the instructions in the Home Connect app.

#### Notes

Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app. → "Safety", Page 4

Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.

# 16.1 Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function

#### Requirements

- Your router has a WPS function.
- Wi-Fi is activated on the router.
- The Wi-Fi basic setting is activated on the appliance.
  - → "Activating Wi-Fi on the appliance", Page 38
- The appliance receives signals from the WLAN home network (Wi-Fi) at its installation location.
- The Home Connect app is installed on your mobile device.
- Press and hold Π for at least 3 seconds.
- The display shows "Aut".
- 2. Press DII.
- 3. Press the WPS button on the router within the next 2 minutes. Take note of the information in the documents for your router.
- ▼ The device connects to the Wi-Fi home network.
- ✓ If the display shows "con" and ? lights up permanently, the appliance is connected to the Wi-Fi home network.
- 4. If the appliance is not connected to the Wi-Fi home network, the display shows "Err".
  - Check whether the appliance is within the range of the Wi-Fi home network.

- Reconnect the appliance to the Wi-Fi home network with WPS function
- 5. Connect the appliance to the Home Connect app. → Page 37

# 16.2 Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function

If your router does not have a WPS function, you can connect the appliance to your WLAN home network (Wi-Fi) manually.

#### Requirements

- Wi-Fi is activated on the router.
- The Wi-Fi basic setting is activated on the appliance.
  - → "Activating Wi-Fi on the appliance", Page 38
- The appliance receives signals from the WLAN home network (Wi-Fi) at its installation location.
- The Home Connect app is installed on your mobile device.
- 1. Press and hold \(\bar{\pi}\) for at least 3 seconds.
- ✓ The display shows "Aut".
- 2. Set the programme to position 2.
- ✓ The display shows "SAP".
- 3. Press DII.
- → flashes on the display.
- ▼ The appliance now sets up its own Wi-Fi home network with the name (SSID) HomeConnect.
- 4. Call up the Wi-Fi settings on the mobile device.
  - Connect the mobile device to the HomeConnect Wi-Fi network and enter the Wi-Fi password (key) HomeConnect.
- Your mobile device connects to the appliance. The connection process may take up to 60 seconds.

- 5. Open the Home Connect app on your mobile device and carry out the steps in the app.
- 6. In the Home Connect app, enter the network name (SSID) and password (key) for your home network.
- 7. Carry out the steps in the Home Connect app to connect the appliance.
- ✓ If the display shows "con" and ? lights up permanently, the appliance is connected to the Wi-Fi home network.
- 8. If the appliance is not connected to the Wi-Fi home network, the display shows "Err".
  - Check whether the appliance is within the range of the Wi-Fi home network.
  - Reconnect the appliance to the Wi-Fi home network with WPS function.
- 9. Connect the appliance to the Home Connect app  $\rightarrow$  Page 37.

# 16.3 Connecting the appliance to the Home Connect app

#### Requirements

- The appliance is connected to the WLAN home network (Wi-Fi).
- The Home Connect app is open and you have logged on.
- **1.** Set the programme to position 3.
- ▼ The display shows "App".
- 2 Press DM
- ▼ The appliance connects to the Home Connect app.

- Once your appliance is displayed in the Home Connect app, carry out the last steps in the Home Connect app.
- ✓ If the display shows "con", the appliance is connected to the Home Connect app.

# 16.4 Activating Wi-Fi on the appliance

**Note:** When Wi-Fi is activated, the energy consumption increases in comparison to the values specified in the consumption value table.

- Press and hold 
   ☐ for approx. 3 seconds.
- 2. Set the programme to position 4.
- ✓ The display shows "Con".
- Press DW repeatedly until the display shows "on".
- ✓ Wi-Fi is activated.

# 16.5 Deactivating Wi-Fi on the appliance

- Press and hold ☐ for at least three seconds.
- 2. Set the programme to position 4.
- ✓ The display shows "Con".
- Press DII repeatedly until the display shows "oFF".
- ✓ Wi-Fi is deactivated.

**Note:** The connection is automatically re-established when the Wi-Fi is switched back on.

# 16.6 Resetting the appliance network settings

- Press and hold for at least 3 seconds.
- 2. Set the programme to position 5.
- ▼ The display shows "rES".

- 3. Press DII.
- ▼ The display shows "YES" .
- 4. Press DII.
- → The network settings are reset.
- If End is shown on the display, the network settings are reset.

#### 16.7 Remote start

Enable the appliance for remote start via the Home Connect app.

#### **Activating remote start**

#### **Notes**

- Remote start is deactivated for safety reasons in the following circumstances:
  - Open the appliance door.
  - Press DII.
  - Press □ .
  - Switch off the appliance.
  - Following a power cut.
- For safety reasons, remote start cannot be activated if the appliance door is open.

#### Requirements

- The appliance is connected to your Wi-Fi home network.
- The appliance is connected to the Home Connect app.
- A programme is selected.
- ▶ Press 🖺 .

If you press and hold the button for at least 3 seconds, the Home Connect menu opens. If you briefly press the button, the appliance is enabled for remote start via the Home Connect app. If you open the appliance door, the function is automatically deactivated.

✓ □ lights up.

**Note:** To deactivate the function, press  $\square$ .

# 16.8 Data protection

Please see the information on data protection.

The first time your appliance is reaistered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the Wi-Fi communication module installed).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous reset to factory settings.


This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

# 17 Basic settings

You can configure the basic settings for your appliance to meet your needs.

# 17.1 Overview of the basic settings

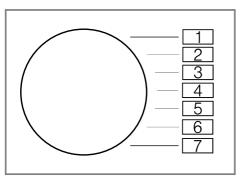

Basic setting	Programme position	Value	Description
End signal	1	0 (off) 1 (quiet) 2 (me- dium) 3 (loud) 4 (very loud)	Set the volume of the signal at the end of the programme.
Button signal	2	0 (off) 1 (quiet) 2 (me- dium) 3 (loud) 4 (very loud)	The volume of the audible signal emitted when the buttons are pressed.
Display brightness	3	1 (low) 2 (me- dium) 3 (high) 4 (very high)	Set the display brightness.
Drum cleaning reminder	4	0 (off) 1 (on)	Activate or deactivate the reminder to clean the drum.

# 17.2 Changing the basic settings

- 1. In order to set the basic settings, press the \$\mathbb{S}\$ button.
- 2. To exit the basic settings, switch off the appliance.

# 18 Cleaning and servicina

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

**Note:** You can find further information in the digital instruction manual by scanning the QR code in the table of contents or on www.boschhome.com.

# 18.1 Cleaning the drum

# ⚠ CAUTION Risk of injury!


Permanently washing at low temperatures and a lack of ventilation for the appliance may damage the drum and cause injury.

- Regularly run a programme for cleaning the drum or wash at temperatures of at least 60 °C.
- ► Leave the appliance to dry after every operation with the door open, and leave the detergent drawer to dry.
- ► Run the **Trumrengöring** programme without laundry and using washing powder.


# 18.2 Cleaning the detergent drawer

1. Pull out the detergent drawer.


2. Press down on the insert and remove the detergent drawer.

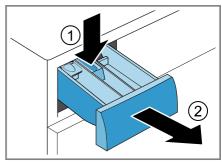


**3.** Pull out the insert upwards.

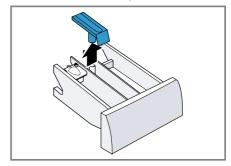

4. Clean the detergent drawer and insert with water and a brush, and then dry them.

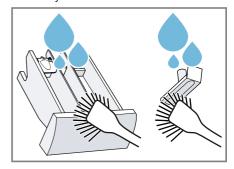

- en Cleaning and servicing
- 5. Fit the insert and click it into place.

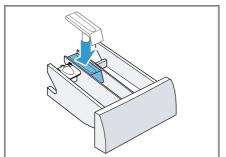

**6.** Clean the opening for the detergent drawer.



7. Push in the detergent drawer.


# 18.3 Cleaning the drain pump

Clean the drain pump in the event of faults, e.g. blockages or rattling noises.


#### **Emptying the drain pump**

- 1. Turn off the water tap.
- 2. Switch off the appliance.
- **3.** Disconnect the appliance's mains plug from the power supply.


4. Open and remove the service flap.

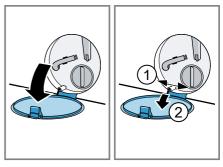

5. Slide a sufficiently large container under the opening.

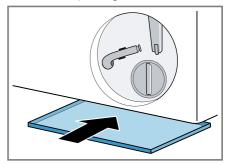


**6.** Take the drain hose out of the holder.

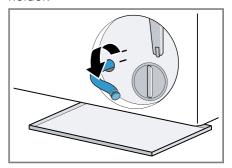


- 7. **A** CAUTION Risk of scalding! When you wash at high temperatures, the detergent solution gets hot.
- ► Do not touch the hot detergent solution.


To allow the detergent solution to flow out into the container, remove the sealing cap.

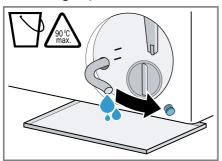

8. Firmly press on the sealing cap.

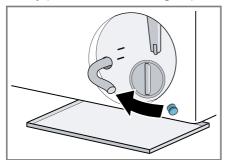


9. Insert the drain hose into the holder.

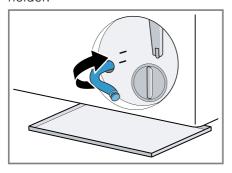


#### Cleaning the drain pump

Requirement: The drain pump is empty. → Page 42


1. Since water may remain in the drain pump, unscrew the pump cap carefully.

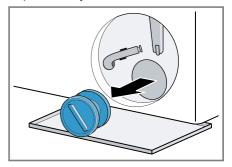

2. Clean the interior, the thread on the pump cap and the pump housing.

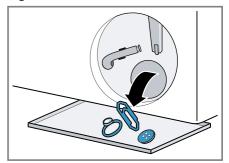


3. Insert the pump cap.

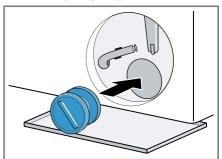


#### en Cleaning and servicing

**4.** Screw the pump cap as far as it will go.

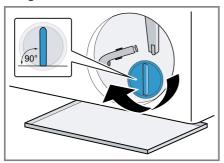

The handle on the pump cap must be in a vertical position.

5. Insert and close the service flap.

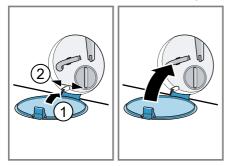

# 19 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.



#### ⚠ WARNING

#### Risk of electric shock!

Incorrect repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ► If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Fault	Cause and troubleshooting		
Creasing.	The load is too large.		
	<ol> <li>The laundry lies in the drum for too long after drying.</li> <li>Remove the laundry from the drum as soon as the drying programme has finished.</li> <li>Spread the items of laundry for cooling.</li> </ol>		
	Unsuitable programme for the type of fabric.  ► Set the suitable programme for the type of fabric.		
	Easy-Care fabrics are dried for too long.		
Spin noise during the drying phase.	Thermal spinning is active.		
The drying time is too long.	The ambient temperature is greater than 30 °C.  ► Ensure that the ambient temperature is lower than 30 °C.		
	Insufficient air circulation at the appliance's installation location.  • Ventilate the appliance's installation location.		
	Fluff has accumulated in the drum.  ► Run the <b>Trumrengöring</b> 🏶 programme without any laundry or detergent.		
Odours have formed in the appliance.	<ul> <li>Humidity and detergent residue may promote the formation of bacteria.</li> <li>► → "Cleaning the drum", Page 41</li> <li>If you are not using the appliance, leave the door and detergent drawer open so that residual water can evaporate.</li> </ul>		

Fault	Cause and troubleshooting			
The display goes out and DM flashes.	Energy-saving mode is active ► Press any button. ✓ The symbol lights up again.			
"E:30 / -80"	Drain pipe or water outlet hose is blocked.  • Clean the drain pipe and the water outlet hose.			
	<ul> <li>Drain pipe or water drain hose is caught or jammed.</li> <li>Ensure that the drain pipe and water drain hose are not kinked or trapped.</li> </ul>			
	Drain pump is blocked.  → "Cleaning the drain pump", Page 42			
	The water outlet hose is connected too high.  Install the water outlet hose at a maximum height of 1 metre.			
	<ul> <li>Detergent dosage is too high.</li> <li>Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down).</li> <li>Reduce the amount of detergent for the next washing cycle with the same load.</li> </ul>			
	<ul> <li>Unapproved extension installed on the water drain hose.</li> <li>▶ Remove any unapproved extensions from the water hose.</li> <li>→ "Connecting the appliance", Page 15</li> </ul>			
	The pump cap is not fully screwed in.  ► Ensure that the pump cap is screwed in all the way into the appliance. The handle on the pump cap must be in a vertical position.  → "Cleaning the drain pump", Page 43			
"E:36 / -25 / -26"	Drain pump is blocked.  ► → "Cleaning the drain pump", Page 42			
"H:32"	The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed.  • Redistribute the laundry in the drum.			
	<b>Note:</b> Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.			
是	The water pressure is low. No remedial action possible.			

Fault	Cause and troubleshooting		
足	The filter in the water inflow is blocked.  ▶ Clean the water inflow filter.		
	The tap is turned off.  ► Turn on the tap.		
	The water inlet hose is kinked or jammed.  ► Ensure that the water inlet hose is not kinked or jammed.		
"E:35 / -10"	There is water in the base trough.  ► Turn off the water tap.  ► Call the after-sales service.  → "Customer Service", Page 56		
	The appliance is leaking.  ► Turn off the water tap.  ► Call the after-sales service.  → "Customer Service", Page 56		
© lights up.	The temperature is too high.  ► Wait until the temperature has dropped.  ► → "Cancelling the washing programme", Page 35		
	Water level is too high.  ► Select a suitable programme for draining.  → "Programmes", Page 27		
**************************************	<ul> <li>Detergent dosage is too high.</li> <li>Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdo clothing, sportswear or items stuffed with down).</li> <li>Reduce the amount of detergent for the next was ing cycle with the same load.</li> </ul>		
"H:95" lights up alternately with End.	- The water pressure is low. ► See → "♣", Page 47		
All other error codes.	Malfunction ► Call the after-sales service. → "Customer Service", Page 56		
The appliance is not working.	The mains plug of the power cord is not plugged in.  Connect the appliance to the power supply.		
	The circuit breaker in the fuse box has tripped.  Check the circuit breaker in the fuse box.		
	There has been a power cut.		

### en Troubleshooting

Fault	Cause and troubleshooting		
The appliance is not working.	<ul> <li>Check whether the lighting in your kitchen or other appliances are working.</li> </ul>		
The programme does not start.	You have not pressed DW. ► Press DW.		
	Door is not closed.  1. Close the door.  2. Press DII to start the programme.		
	Childproof lock is activated.  ► → "Deactivating the childproof lock", Page 35		
	+/- is activated.  ► Check whether +/- is activated.  → "Buttons", Page 23		
	Laundry is caught in the door.  1. Open the door again.  2. Remove any trapped laundry.  3. Close the door.  4. Press DII to start the programme.		
The door cannot be opened.	The temperature is too high.  ► Wait until the temperature has dropped.  ► → "Cancelling the washing programme", Page 35		
	Water level is too high.  ► Select a suitable programme for draining.  → "Programmes", Page 27		
	Power failure.  ► Open the door using the emergency release.  → "Emergency release", Page 55		
The water is not draining.	Drain pipe or water outlet hose is blocked.  • Clean the drain pipe and the water outlet hose.		
	<ul> <li>Drain pipe or water drain hose is caught or jammed.</li> <li>► Ensure that the drain pipe and water drain hose are not kinked or trapped.</li> </ul>		
	Drain pump is blocked.  ► → "Cleaning the drain pump", Page 42		
	The water outlet hose is connected too high.  ► Install the water outlet hose at a maximum height of 1 metre.		
	Detergent dosage is too high.		

Fault	Cause and troubleshooting		
The water is not draining.	<ul> <li>Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down).</li> <li>Reduce the amount of detergent for the next washing cycle with the same load.</li> </ul>		
	Unapproved extension installed on the water drain hose.  ► Remove any unapproved extensions from the water hose.  → "Connecting the appliance", Page 15		
	The pump cap is not fully screwed in.  ► Ensure that the pump cap is screwed in all the way into the appliance. The handle on the pump cap must be in a vertical position.  → "Cleaning the drain pump", Page 43		
Water is not flowing in. Detergent is not	You have not pressed DW. ▶ Press DW.		
being dispensed.	The filter in the water inflow is blocked.  • Clean the water inflow filter.		
	The tap is turned off.  ► Turn on the tap.		
	<ul><li>The water inlet hose is kinked or jammed.</li><li>Ensure that the water inlet hose is not kinked or jammed.</li></ul>		
The spin cycle runs several times.	The unbalanced load detection system eliminates an imbalance by repeatedly redistributing the laundry.  Not a fault – no action required.		
	<b>Note:</b> When loading, where possible, place large and small items of laundry together in the drum. Different sized items of laundry distribute themselves better during the spin cycle.		
No water is visible in the drum.	<ul> <li>Water is below the visible area.</li> <li>Not a fault – no action required.</li> <li>Do not add any extra water to the appliance while it is operating.</li> </ul>		
Residual water is present in the compartment %.	Insert in compartment % is blocked.  ► → "Cleaning the detergent drawer", Page 41		

Fault	Cause and troubleshooting		
Vibrations and movement of the appliance	Appliance is not correctly aligned.  ► → "Aligning the appliance", Page 16		
whilst spinning.	The appliance feet are not fixed.  ► Secure the appliance feet.  → "Aligning the appliance", Page 16		
	Transit bolts have not been removed.  ► → "Removing the transit bolts", Page 14.		
Drum rotates, water does not flow in.	Load detection is active.  ► Not a fault – no action required.		
	Note: The load detection can take up to two minutes.		
Heavy foam build-up	Detergent dosage is too high.  Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down).  Reduce the amount of detergent for the next washing cycle with the same load.		
High spin speed not reached.	<ul><li>A low spin speed is selected.</li><li>► The next time you run a wash cycle, set a higher spin speed.</li></ul>		
	<ul><li>☐ is activated.</li><li>► Select the programmes that are suitable for the type of fabric.</li></ul>		
	Unbalance load detection system is using a reduced spin speed to eliminate an unbalance.  Redistribute the laundry in the drum.		
	<b>Note:</b> Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.		
	Start the <b>Centrif.</b> programme.		
The spin programme does not start.	Drain pipe or water outlet hose is blocked.  ► Clean the drain pipe and the water outlet hose.		
	<ul> <li>Drain pipe or water drain hose is caught or jammed.</li> <li>► Ensure that the drain pipe and water drain hose are not kinked or trapped.</li> </ul>		
	The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed.  • Redistribute the laundry in the drum.		

Fault	Cause and troubleshooting		
The spin programme does not start.	<b>Note:</b> Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.		
	Start the Centrif. programme.		
Loud noises during the spin cycle.	Appliance is not correctly aligned.  ► → "Aligning the appliance", Page 16		
	The appliance feet are not fixed.  ► Secure the appliance feet.  → "Aligning the appliance", Page 16		
	Transit bolts have not been removed.  ► → "Removing the transit bolts", Page 14.		
Banging noises, rattling in the drain pump.	Foreign bodies have got into the drain pump.  → "Cleaning the drain pump", Page 42		
Slurping, rhythmical suction noise.	The drain pump is active, the detergent solution is pumped out.  Not a fault – normal operating noise.		
The spin result is not satisfactory. The laundry is too wet/too damp.	<ul> <li>A low spin speed is selected.</li> <li>► The next time you run a wash cycle, set a higher spin speed.</li> <li>► Start the Centrif. programme.</li> </ul>		
	<ul><li>☐ is activated.</li><li>► Select the programmes that are suitable for the type of fabric.</li></ul>		
	Drain pipe or water outlet hose is blocked.  • Clean the drain pipe and the water outlet hose.		
	<ul> <li>Drain pipe or water drain hose is caught or jammed.</li> <li>Ensure that the drain pipe and water drain hose are not kinked or trapped.</li> </ul>		
	The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed.  • Redistribute the laundry in the drum.		
	<b>Note:</b> Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.		
	Start the <b>Centrif.</b> programme.		
	Unbalance load detection system is using a reduced spin speed to eliminate an unbalance.		

Fault	Cause and troubleshooting		
The spin result is not	► Redistribute the laundry in the drum.		
satisfactory. The laundry is too wet/too damp.	<b>Note:</b> Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.		
	Start the <b>Centrif.</b> programme.		
Detergent residue on the damp washing.	Detergents may contain water-insoluble substances that deposit on the laundry.  Start the <b>Sköljning</b> programme.		
Detergent residue on the dry laundry.	Detergents may contain water-insoluble substances that deposit on the laundry.  • Brush out the laundry after washing and drying.		
Home Connect is not working properly.	Different causes are possible.  • Go to www.home-connect.com.		
No connection to the home network.	Wi-Fi is switched off.  → "Activating Wi-Fi on the appliance", Page 38		
	<ul> <li>Wi-Fi is activated but a connection to your home network cannot be established.</li> <li>1. Ensure that the home network is available.</li> <li>2. Reconnect the appliance to the home network.  → "Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function", Page 36  → "Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function", Page 37</li> </ul>		
Water is leaking out at the water inlet hose.	<ul> <li>Water inlet hose is not correctly/securely connected.</li> <li>1. Connect the water supply hose correctly.  → "Connecting the water inlet hose", Page 15</li> <li>2. Tighten the screw connection.</li> </ul>		
Water is leaking out at the water outlet hose.	The water outlet hose is damaged.  • Replace the damaged water outlet hose.		
	Water outlet hose is not connected correctly.  ► Connect the water outlet hose correctly.  → "Water outlet connection types", Page 15		
Fluff on the laundry.	Fluff has accumulated in the drum.  ► Run the <b>Trumrengöring</b> programme without any laundry or detergent.		
Water inlet noise during the drying phase.	<ul><li>Drying phase requires water.</li><li>1. Not a fault.</li><li>2. Make sure that the water tap also remains open during the drying phase.</li></ul>		

Set a timed programme for the subsequent drying.

→ "Programmes", Page 27

time.

### en Troubleshooting


Fault	Cause and troubleshooting		
Fan noise during the washing phase.	Process fan is active.  ► Not a fault – normal operating noise.		
The programme duration changes during the wash cycle.	The programme operation is optimised electronically.  This may change the programme duration.  Not a fault – no action required.		
	The unbalanced load detection system eliminates an imbalance by repeatedly redistributing the laundry.  Not a fault – no action required.		
	<b>Note:</b> When loading, where possible, place large and small items of laundry together in the drum. Different sized items of laundry distribute themselves better during the spin cycle.		
	Foam detection system switches on a rinse cycle if foam build-up is too high.  Not a fault – no action required.		
Drum jerks after the programme starts.	This is caused by an internal motor test.  ► Not a fault – no action required.		
Rushing, hissing noise.	Water is flushed under pressure into the detergent drawer.  ► Not a fault – normal operating noise.		
Detergent or fabric softener drips off the seal and collects on the door or in the seal fold.	Too much detergent/fabric softener in the detergent drawer.  ► When dosing liquid detergent and fabric softener, observe the marking in the detergent drawer and do not dose above this.		
DII cannot be operated.	Drying phase active.  ► Not a fault – no action required.		

# 19.1 Emergency release

#### Releasing the door

**Requirement:** The drain pump is empty. → Page 42

- 1. **ATTENTION!** Escaping water may cause material damage.
- Do not open the door if you can see water through the glass. Pull the emergency release downwards with a tool and release.

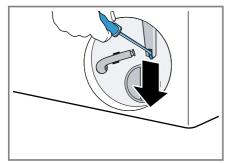

- The door lock is released.
- 2. Insert the maintenance flap and lock it into place.
- 3. Close the maintenance flap.

# 20 Transportation, storage and disposal

# 20.1 Removing the appliance

**Note:** You can find further information in the digital instruction manual by scanning the QR code in the table of contents or on www.boschhome.com.


- **1.** Turn off the tap.
- 2. Empty the water inlet hose.
- 3. Switch off the appliance.
- 4. Unplug the appliance's mains plug.

- 5. Drain the water. → "Cleaning the drain pump". Page 42
- 6. Detach the hoses.

#### 20.2 Inserting the transit bolts

Secure the appliance for transportation using transit bolts in order to prevent damage.

1. Use a screwdriver to remove the 4 cover caps.

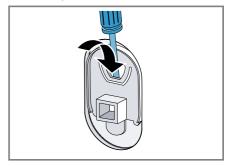

Keep the cover caps.

- 2. Install the 4 transit bolts. Refer to the description
  - → "Removing the transit bolts", Page 14 for this and proceed in reverse order.

# 20.3 Using the appliance again

► For further information, see → "Installation and connection".

Page 13 and

→ "Starting an empty washing cycle", Page 20.

#### 20.4 Disposing of old appliance

Valuable raw materials can be reused by recycling.

# ⚠ WARNING Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.
- 1. Unplug the appliance from the mains.
- 2. Cut through the power cord.
- 3. Dispose of the appliance in an environmentally friendly manner. Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

# 21 Customer Service

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area

**Note:** Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information on the warranty period and terms of warranty in your country is available from our aftersales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

# 21.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate. Depending on the model, the rating plate is located:

- On the inside of the door.
- On the inside of the maintenance flap.
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

# 22 Consumption values

The following information is provided in accordance with the EU Ecodesign Regulation. The values specified for programmes other than **Eco 40-60** are only given as a guide and were determined in accordance with the applicable standards EN60456 and EN62512.

Programme	Load (kg)	Pro- gramm e dura- tion (hr:min	Energy con- sump- tion (kWh/ cycle) <sup>1</sup>	Water con- sump- tion (I/ cycle) <sup>1</sup>	Max- imum temper- ature (°C) 5 mins <sup>1</sup>	Spin speed (rpm) <sup>1</sup>	Residual moisture (%)1
Eco 40-60 <sup>2</sup>	10,0	3:55	1,000	74,0	40	1400	53,00
Eco 40-60 <sup>2</sup>	5,0	2:55	0,450	50,0	30	1400	53,00
Eco 40-60 <sup>2</sup>	2,5	2:20	0,180	35,0	22	1400	53,00
Eco 40-60 + Wash+Dry + 12 2	6,0	8:00	3,820	88,0	23	-	-0,1
Eco 40-60 + Wash+Dry + 🖽	3,0	4:00	1,950	53,0	23	-	-0,1
Bomull 20 °C	10,0	4:00	0,500	94,0	22	1400	53,00
Bomull 40 °C	10,0	4:00	1,200	94,0	39	1400	53,00
Bomull 60 °C	10,0	3:23	1,900	94,0	55	1400	53,00
Bomull 40 °C + ₺	10,0	4:29	1,400	110,0	39	1400	53,00
Syntet 40 °C	4,0	2:29	0,800	62,0	44	1400	28,00
Mix 40 °C	4,0	1:00	0,700	48,0	41	1400	55,00
	2,0	0:41	0,200	42,0	23	800	30,00

Due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions, the actual values may deviate from the stated values.

Test programme in accordance with the EU Ecodesign Directive and the EU Energy Labelling Regulation with cold water (15 °C).

23 Technica	I data
Appliance height	84,8 cm
Appliance width	59,8 cm
Appliance depth	61,6 cm
Appliance depth with door closed	65,4 cm
Appliance depth with door open	cm
Weight	84,8 kg
Maximum load	10,0 kg
Mains voltage	220-240 V, 50 Hz
── Minimum installation protection	10A
Nominal power	1900-2300 W
Power consumption	<ul> <li>Off mode: 0,50 W</li> <li>Left-on mode: 0,50 W</li> <li>Time until the networked standby mode is set (Wi-Fi): 5 mins</li> <li>Networked standby mode (Wi-Fi): 2,00 W</li> </ul>
Water pressure	<ul> <li>Minimum:     100 kPa     (1 bar)</li> <li>Maximum:     1000 kPa     (10 bar)</li> </ul>
Length of the water inlet hose	150 cm
Length of the water outlet hose	150 cm

Length of the	210 cm	
power cord		

This product contains light sources from energy efficiency class F. These light sources are available as a spare part and must only be replaced by trained specialist staff. You can find more information about your model online at https://eprel.ec.europa.eu/1. This web address is linked to the official EU EPREL product database. Please then follow the instructions on searching for the model. The model identifier is made up of the characters before the slash in the product number (E-Nr.) on the rating plate. Alternatively, you can also find the model identifier in the first line of the

# 24 Declaration of Conformity

EU energy label.

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the basic requirements and other relevant provisions of Directive 2014/53/FU.

A detailed RED Declaration of Conformity can be found online at www.bosch-home.com among the additional documents on the product page for your appliance.



Only applies to countries in the European Economic Area

Hereby, BSH Hausgeräte GmbH declares that the appliance with Home Connect functionality is in compliance with relevant statutory requirements.1

A detailed Declaration of Conformity can be found online at www.boschhome.co.uk among the additional documents on the product page for your appliance.1

# UK CA

Only applies to Great Britain 2.4 GHz band (2400-2483.5 MHz): Max. 100 mW 5 GHz band (5150-5350 MHz + 5470-5725 MHz): Max. 100 mW

	-									
	BE	BG	CZ	DK	DE	EE	ΙE	EL	ES	
	FR	HR	IT	CY	LI	LV	LT	LU	HU	
	MT	NL	AT	PL	PT	RO	SI	SK	FI	
	SE	NO	CH	TR	IS	UK (NI)			'	
5 GHz WLAN (Wi-Fi): For indoor use only.										
AL	ВА	M	D	ME	MK	RS	UK		UA	
5 GHz WLAN (Wi-Fi): For indoor use only.										

<sup>&</sup>lt;sup>1</sup> Only applies to Great Britain



# Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- · Expert tips & tricks for your appliance
- · Warranty extension options
- Discounts for accessories & spare-parts
- Digital manual and all appliance data at hand
- Easy access to Bosch Home Appliances Service

Free and easy registration – also on mobile phones: **www.bosch-home.com/welcome** 



# Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you: www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

#### BSH Hausgeräte GmbH

Carl-Wery-Straße 34 81739 München, GERMANY www.bosch-home.com

A Bosch Company



Valid within Great Britain: Imported to Great Britain by BSH Home Appliances Ltd. Grand Union House Old Wolverton Road Wolverton, Milton Keynes MK12 5PT United Kingdom