 
 
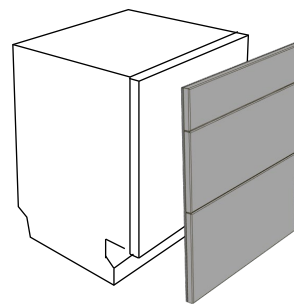 
 


- SE** Kopplingsplatta diskmaskin
- DK** Koblingsplade opvaskemaskine
- NO** Koblingsplate oppvaskmaskin
- FI** Kiinnityslevy astianpesukoneen etulevylle
- EN** Connector plate dishwasher



 
E10900041275

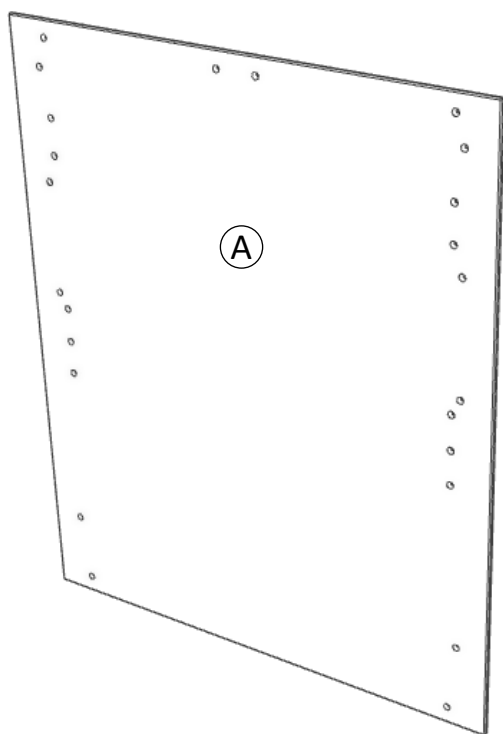


14-18x




1

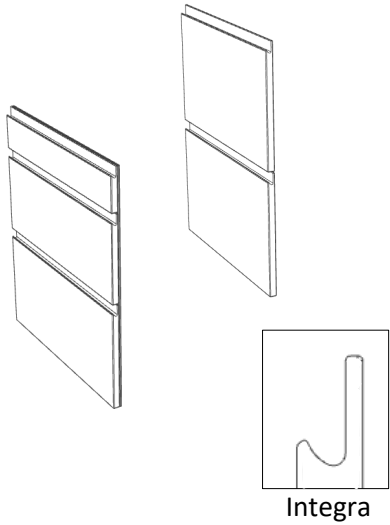

2

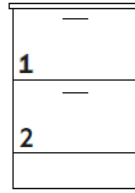 


 Shaker front
Fasett front
Heritage front
Trend front
Edge front
Gloss front


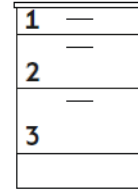


Shaker front
Fasett front
Heritage front
Trend front
Edge front
Gloss front

 
3

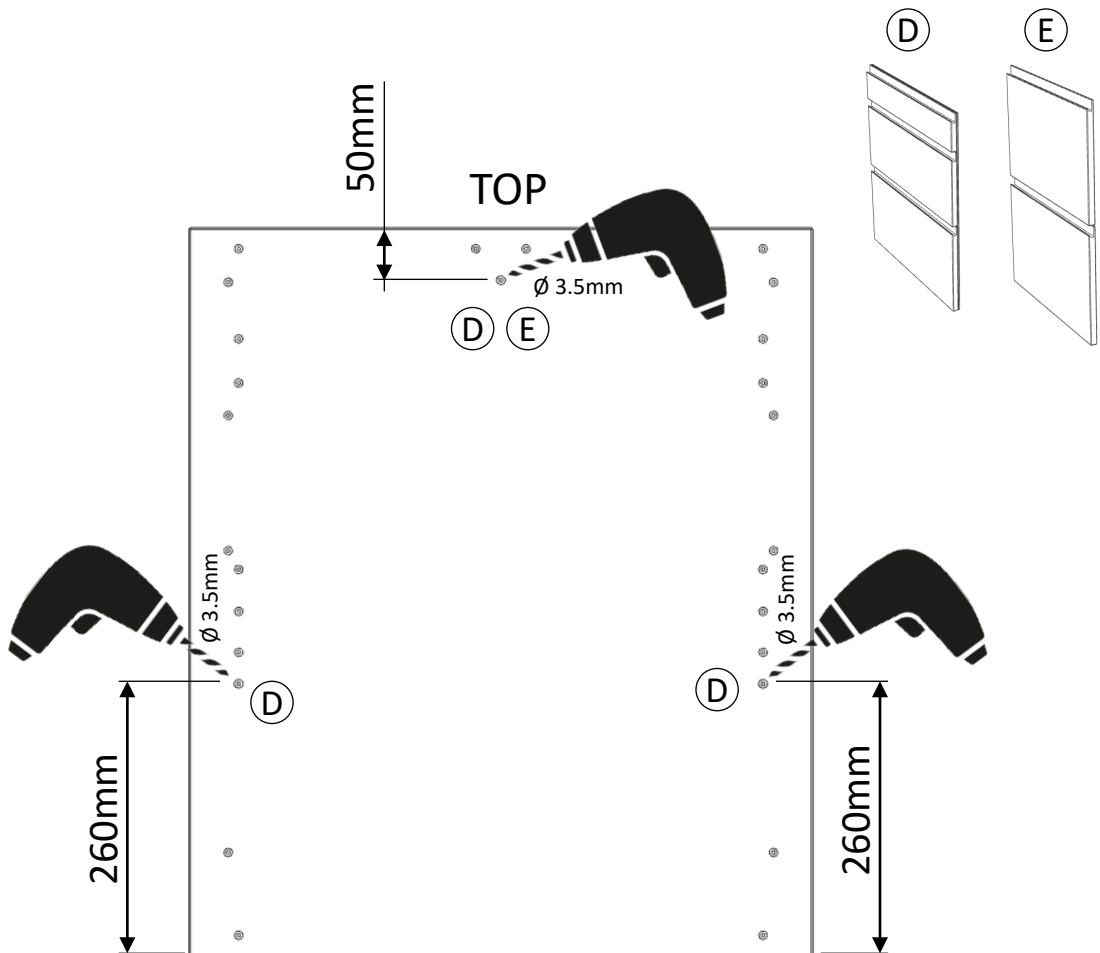


4

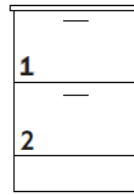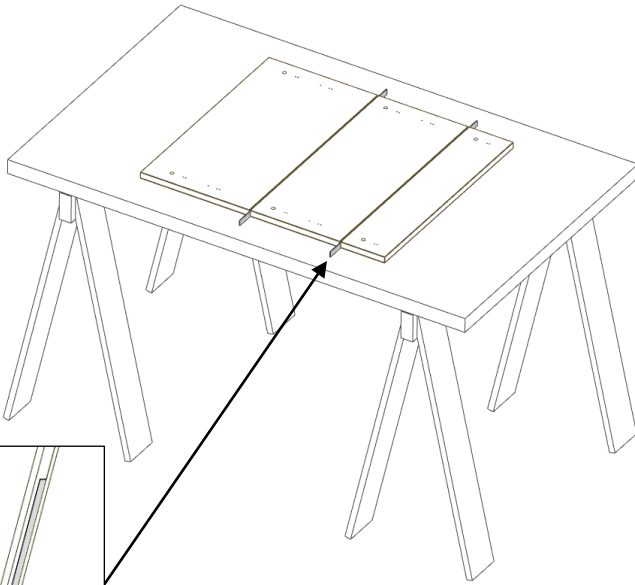  





Ⓒ 2x
3 mm

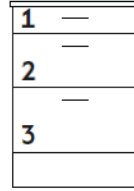 

Ⓑ 4x
2 mm

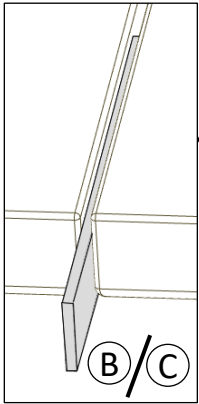 

5

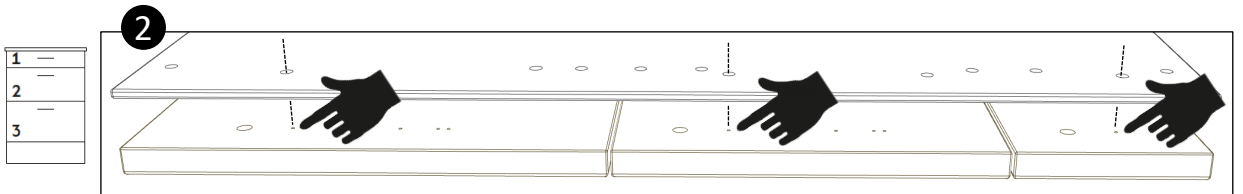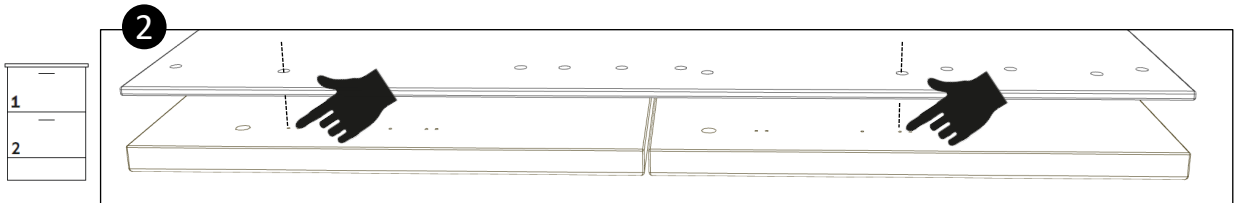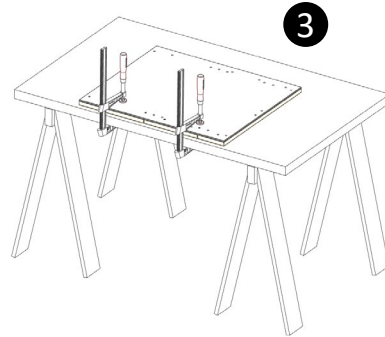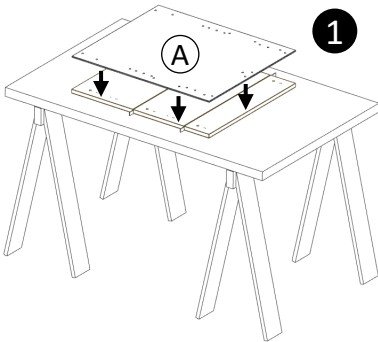    




6

A

1	—
2	—

13x 

   14x 

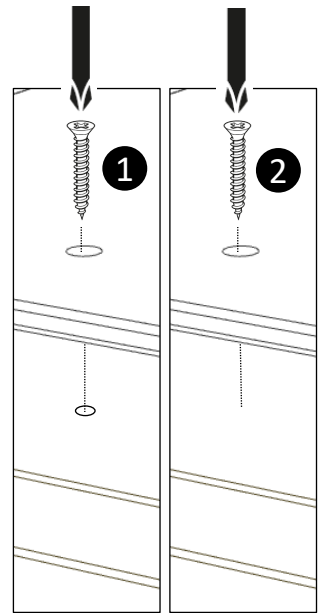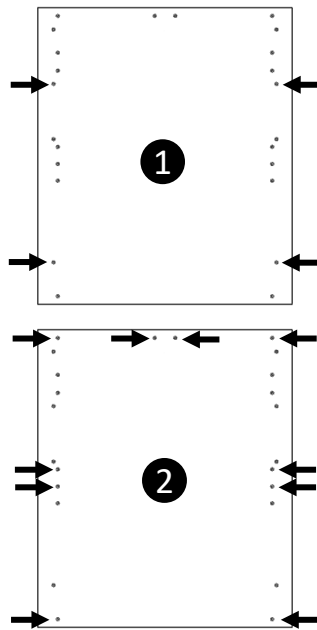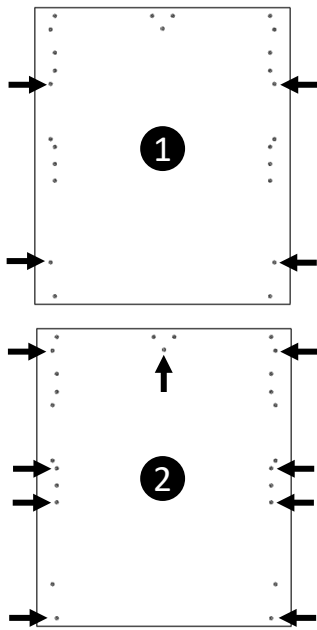

Integra front

All other fronts




6

B

1	—
2	—
3	—

17x 

   18x 

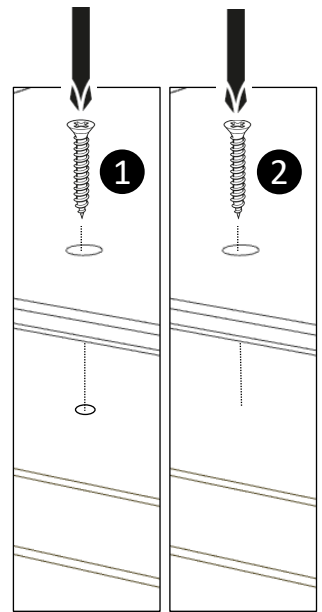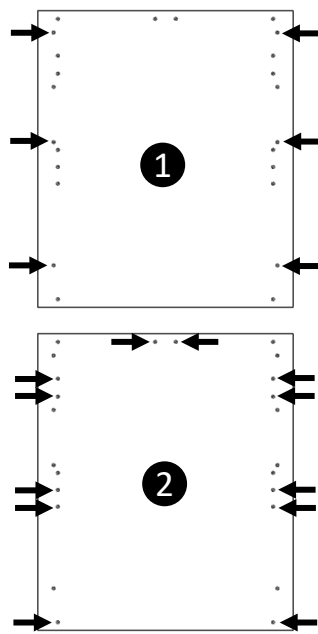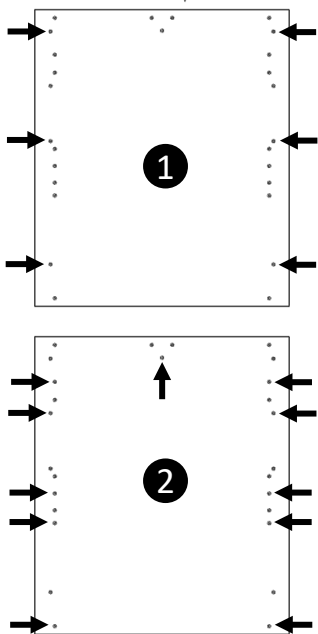

Integra front

All other fronts

