



Register your
new device on
MyBosch now and
get free benefits:
**[bosch-home.com/
welcome](https://bosch-home.com/welcome)**



Oven

HRG.720.3

[en] User manual and installation instructions



You can find additional information and explanations online.
Scan the QR code on the title page.



Table of contents

INFORMATION FOR USE

| | | |
|----|--|----|
| 1 | Safety | 2 |
| 2 | Preventing material damage | 5 |
| 3 | Environmental protection and saving energy | 6 |
| 4 | Familiarising yourself with your appliance | 6 |
| 5 | Accessories | 9 |
| 6 | Before using for the first time | 10 |
| 7 | Basic operation | 11 |
| 8 | Rapid heating | 11 |
| 9 | Time-setting options | 12 |
| 10 | Steam | 13 |
| 11 | Programmes | 15 |
| 12 | Childproof lock | 17 |

| | | |
|------|---|----|
| 13 | Basic settings | 17 |
| 14 | Cleaning and servicing | 18 |
| 15 | Pyrolytic self-cleaning | 20 |
| 16 | Cleaning aid | 21 |
| 17 | Descaling | 21 |
| 18 | Appliance door | 22 |
| 19 | Shelf supports | 25 |
| 20 | Troubleshooting | 27 |
| 21 | Disposal | 30 |
| 22 | Customer Service | 30 |
| 23 | How it works | 30 |
| 24 | INSTALLATION INSTRUCTIONS | 35 |
| 24.1 | General installation instructions | 35 |

1 Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

This appliance is designed only to be built into kitchen units. Read the special installation instructions.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

Only use this appliance:

- To prepare meals and drinks.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 4000 m above sea level.

Do not use the appliance:

- with an external timer or a remote control.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

1.4 Safe use

Always place accessories in the cooking compartment the right way round.

→ "Accessories", Page 9

WARNING – Risk of fire!

Combustible objects that are left in the cooking compartment may catch fire.

- Never store combustible objects in the cooking compartment.

- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Loose food remnants, fat and meat juices may catch fire.

- ▶ Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

Opening the appliance door creates a draught. Greaseproof paper may come into contact with the heating element and catch fire.

- ▶ Never place greaseproof paper loosely over accessories when preheating the appliance and while cooking.
- ▶ Always cut greaseproof paper to size and use a plate or baking tin to hold it down.

⚠ WARNING – Risk of burns!

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

Accessories and cookware get very hot.

- ▶ Always use oven gloves to remove accessories or cookware from the cooking compartment.

When the cooking compartment is hot, any alcoholic vapours inside may catch fire. The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Only use small quantities of drinks with a high alcohol content in food.
 - ▶ Do not heat spirits ($\geq 15\%$ vol.) when undiluted (e.g. for marinating or pouring over food).
 - ▶ Open the appliance door carefully.
- The telescopic shelves become hot when the appliance is in use.
- ▶ Allow hot telescopic shelves to cool down before touching them.
 - ▶ Only touch hot telescopic shelves with oven gloves.

⚠ WARNING – Risk of scalding!

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ Open the appliance door carefully.
- ▶ Keep children at a safe distance.

If there is water in the cooking compartment when it is hot, this may create hot steam.

- ▶ Never pour water into the cooking compartment when the cooking compartment is hot.

⚠ WARNING – Risk of injury!

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

The appliance and its parts that can be touched may have sharp edges.

- ▶ Take care when handling and cleaning them.
- ▶ If possible, wear protective gloves.

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ▶ Keep your hands away from the hinges.
- Components inside the appliance door may have sharp edges.

- ▶ Wear protective gloves.

Alcoholic vapours may catch fire in the hot cooking compartment, and the appliance door may spring open and may fall off. The door panels may shatter and fragment.

→ *"Preventing material damage", Page 5*

- ▶ Only use small quantities of drinks with a high alcohol content in food.
- ▶ Do not heat spirits ($\geq 15\%$ vol.) when undiluted (e.g. for marinating or pouring over food).
- ▶ Open the appliance door carefully.

⚠ WARNING – Risk of electric shock!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord. An ingress of moisture can cause an electric shock.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer service. → *Page 30*

Once the appliance has been installed, the openings in the back panel of the appliance must not be accessible to children.

- ▶ Read the special installation instructions.

⚠ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

1.5 Halogen bulb

⚠ WARNING – Risk of burns!

The bulbs in the cooking compartment get very hot. There is still a risk of burning for some time after they have been switched off.

- ▶ Do not touch the glass cover.
- ▶ Avoid contact with your skin when cleaning.

⚠ WARNING – Risk of electric shock!

When changing the bulb, the bulb socket contacts are live.

- ▶ Before replacing the bulb, ensure that the appliance is switched off in order to prevent a potential electric shock.
- ▶ Also unplug the appliance from the mains or switch off the fuse in the fuse box.

1.6 Steam

Follow these instructions when using a steam function.

⚠ WARNING – Risk of scalding!

The water in the water tank may become very hot if you operate the appliance for long periods.

- ▶ Always empty the water tank after using the steam function.

Hot steam is generated in the cooking compartment.

- ▶ Do not reach into the cooking compartment when using steam.

Hot liquid may spill over the sides of the accessory when it is removed from the cooking compartment.

- ▶ Remove hot accessories with care and always wear oven gloves.

⚠ WARNING – Risk of fire!

Due to the hot surfaces, vapours from flammable liquids may catch fire in the cooking compartment (explosion). The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Do not pour flammable liquids (e.g. alcoholic drinks) into the water tank.
- ▶ Only fill the water tank with water or with the descaling solution we have recommended.

1.7 Cleaning function

⚠ WARNING – Risk of fire!

Loose food remnants, fat and meat juices may catch fire when the cleaning function is in progress.

- ▶ Before you start the cleaning function, always remove coarse dirt from the cooking compartment.

- ▶ Never clean accessories at the same time.

The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never hang combustible objects, e.g. tea towels, on the door handle.

- ▶ Leave the front of the appliance clear.

- ▶ Keep children at a safe distance.

If the door seal is damaged, a large amount of heat is generated around the door.

- ▶ Do not scrub or remove the seal.

- ▶ Never operate the appliance if the seal is damaged or missing.

⚠ WARNING – Risk of serious harm to health!

The appliance gets very hot when the cleaning function is in progress. The non-stick coating on baking trays and tins is destroyed and noxious gases are released.

- ▶ Never clean non-stick baking trays or baking tins using the cleaning function.
- ▶ Never clean accessories at the same time.

⚠ WARNING – Risk of harm to health!

The cleaning function heats up the cooking compartment to a very high temperature so that food left over from roasting, grilling and

baking will burn off. This process releases vapours, which can irritate mucous membranes.

- ▶ Keep the kitchen well ventilated while the cleaning function is running.
- ▶ Do not remain in the room for long periods.
- ▶ Keep children and pets away.

⚠ WARNING – Risk of burns!

The cooking compartment gets very hot when the cleaning function is in progress.

- ▶ Never open the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children at a safe distance.

⚠ The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never touch the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children at a safe distance.

2 Preventing material damage

2.1 General

ATTENTION

Alcoholic vapours may catch fire in the hot cooking compartment and cause permanent damage to the appliance. The appliance door may spring open due to an explosion and it may fall off. The door panels may shatter and fragment. Due to the resulting negative pressure, the cooking compartment may become considerably deformed inwards.

- ▶ Do not heat spirits ($\geq 15\%$ vol.) when undiluted (e.g. for marinating or pouring over food).

If there is water on the cooking compartment floor when operating the appliance at temperatures above $120\text{ }^{\circ}\text{C}$, this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.

Objects on the cooking compartment floor at over $50\text{ }^{\circ}\text{C}$ will cause heat to build up. The baking and roasting times will no longer be correct and the enamel will be damaged.

- ▶ Do not place any accessories, greaseproof paper or foil of any kind on the cooking compartment floor.
- ▶ Only place cookware on the cooking compartment floor if a temperature under $50\text{ }^{\circ}\text{C}$ has been set.

When the cooking compartment is hot, any water inside it will create steam. The change in temperature may cause damage.

- ▶ Never pour water into the cooking compartment when it is still hot.
- ▶ Never place cookware containing water on the cooking compartment floor.

The prolonged presence of moisture in the cooking compartment leads to corrosion.

- ▶ Allow the cooking compartment to dry after use.
- ▶ Do not keep moist food in the cooking compartment for a long time with the door closed.

- ▶ Do not store food in the cooking compartment.
- ▶ Take care not to trap anything in the appliance door. Fruit juice dripping from the baking tray leaves stains that cannot be removed.

- ▶ When baking very juicy fruit flans, do not pack too much on the baking tray.

- ▶ If possible, use the deeper universal pan.

Using oven cleaner in a hot cooking compartment damages the enamel.

- ▶ Never use oven cleaner in the cooking compartment when it is still warm.
- ▶ Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance.

If the seal is very dirty, the appliance door will no longer close properly during operation. This may damage the front of adjacent kitchen units.

- ▶ Keep the seal clean at all times.
- ▶ Never operate the appliance if the seal is damaged or missing.

Sitting or placing objects on the appliance door may damage it.

- ▶ Do not place, hang or support objects on the appliance door.
- ▶ Do not place cookware or accessories on the appliance door.

With certain models, accessories may scratch the door pane when closing the appliance door.

- ▶ Always push accessories fully into the cooking compartment.

If aluminium foil comes into contact with the door pane, it could cause permanent discolouration.

- ▶ Do not allow aluminium foil in the cooking compartment to come into contact with the door pane.

2.2 Steam

Follow these instructions when using the steam function.

ATTENTION

Silicone bakeware is not suitable for combined operation with steam.

- ▶ Cookware must be heat- and steam-resistant. Using cookware with rust spots may cause corrosion in the cooking compartment. Even the smallest spots of rust can cause corrosion.
- ▶ Do not use cookware with rust spots. Hot water in the water tank may damage the steam system.
- ▶ Only fill the water tank with cold water.

If descaling solution comes into contact with the control panel or other delicate surfaces, it will damage them.

- ▶ Remove descaling solution immediately with water. Cleaning the water tank in the dishwasher will damage it.
- ▶ Do not clean the water tank in the dishwasher.
- ▶ Clean the water tank with a soft cloth and standard washing-up liquid.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Only preheat the appliance if the recipe or the recommended settings tell you to do so.

→ "How it works", Page 30

- ✓ Not preheating the appliance can reduce the energy used by up to 20%.

Use dark-coloured, black-coated or enamelled baking tins.

- ✓ These types of baking tin absorb the heat particularly well.

Open the appliance door as little as possible during operation.

- ✓ This maintains the temperature in the cooking compartment and eliminates the need for the appliance to reheat.

When baking multiple dishes, do so in succession or in parallel.

- ✓ The cooking compartment is heated after baking the first dish. This reduces the baking time for the subsequent cakes.

For longer cooking times, you can switch the appliance off 10 minutes before the cooking time ends.

- ✓ There is sufficient residual heat to finish cooking the dish.

Remove any accessories that are not being used from the cooking compartment.

- ✓ Accessories that are not being used do not need to be heated.

Allow frozen food to defrost before cooking.

- ✓ This saves the energy that would otherwise be required to defrost it.

Note: In accordance with the EU Ecodesign Directive 2023/826, this appliance is in a different state when switched off. This is referred to below as low power mode.

Even when the main function is not active, the appliance needs energy for:

- Detecting operation of the touch keys
- Monitoring door opening
- Editing the time (without display)


By definition, therefore, there is neither an "off" nor a "standby" mode, which is why the term low power mode is used. EN IEC 60350-1:2023 must be used to measure low power mode.

4 Familiarising yourself with your appliance

4.1 Control elements

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

Note: On certain models, specific details such as colour and shape may differ from those pictured.

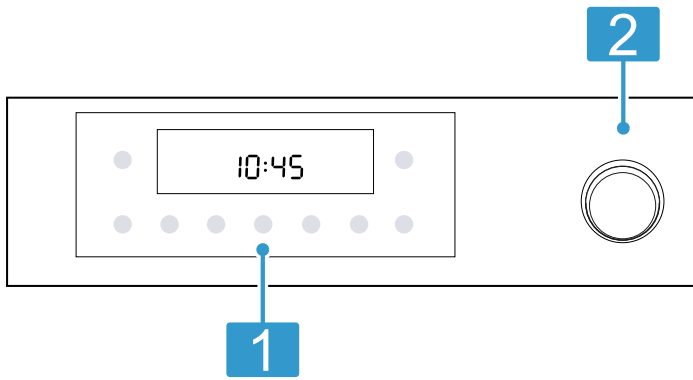

Buttons and display

1 The buttons are touch-sensitive surfaces. To select a function, simply press lightly on the relevant field. The display shows symbols for active functions and the time-setting options.
→ "Buttons and display", Page 7

Water tank

2 Filling and emptying the water tank.
→ "Steam", Page 13

4.2 Buttons and display

You can use the buttons to set various functions for your appliance. The display shows the settings. If a function is active, the corresponding symbol lights up on the display. The clock symbol ☹ only lights up when you change the time.








4.3 Types of heating and functions

To ensure that you always find the right type of heating to cook your food, we explain the differences and applications below.

When you select a type of heating, the appliance suggests a suitable temperature or setting. You can use these values or change them within the specified range.



| Symbol | Type of heating | What it's used for and how it works |
|--------|--|--|
| | Full-surface grill Grill settings: 1 = low 2 = medium 3 = high | Grill flat items such as vegetables and sausages, or make toast. Gratinated food. The entire area below the grill element becomes hot. |
| | Hot air grilling 30 - 275 °C | Roast poultry, whole fish or larger pieces of meat. The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food. |
| | Hot air gentle 125 - 275 °C | Cook selected dishes gently on one level without preheating. The fan distributes the heat from the ring-shaped heating element in the back wall evenly around the cooking compartment. The food is cooked in phases using residual heat. Always keep the appliance door closed when cooking. If you open the appliance door even briefly, the appliance will continue to heat without utilising any residual heat. This type of heating is used to determine the energy consumption in air recirculation mode and the energy efficiency class. |
| | 3D hot air 30 - 275 °C | Bake or roast on one or more levels. The fan distributes the heat from the ring heating element in the back wall evenly around the cooking compartment. |

| Symbol | Function |
|--------|--|
| | Switch the appliance on or off. |
| | Press briefly: Start or pause operation. Press and hold for approx. 3 seconds: Cancel operation. |
| | Open the menu for types of heating and other functions. → "Types of heating and functions", Page 7 |
| | Select a temperature or grill setting for the cooking compartment. → "Temperature and setting levels", Page 8 |
| | Select a weight for the programmes. → "Programmes", Page 15 |
| | Select a function, e.g. type of heating. Decrease or increase the setting values. |
| | Select the time ☹, timer ⌘, cooking time I→I and end time →I. To select the individual time-setting options, press the ☹ button several times. → "Time-setting options", Page 12 |
| | Preheat the cooking compartment rapidly without accessories. → "Rapid heating", Page 11 |
| | Select the cleaning function for the cooking compartment. → "Pyrolytic self-cleaning", Page 20 → "Cleaning aid", Page 21 → "Descaling", Page 21 |
| | To activate or deactivate the childproof lock, press and hold for approx. 3 seconds. → "Childproof lock", Page 17 |

| Symbol | Type of heating | What it's used for and how it works |
|--|--|---|
|  | Top/bottom heating 30 - 275 °C | Traditionally bake or roast on one level. This type of heating is especially good for cakes with moist toppings. The heat is emitted evenly from above and below. This type of heating is used to measure the energy consumption in the conventional mode. |
|  | Pizza setting 30 - 275 °C | Cook pizza or food that requires a lot of heat from below. The bottom heating element and the ring heating element in the back wall heat the cooking compartment. |
|  | Air Fry 30 - 275 °C | Cook until crispy, on one level with little fat. Especially suitable for food that is usually fried in oil, e.g. chips. |
|  | Hot air with steam assistance 80 - 240 °C | Baking and frying with steam assistance is particularly well suited to frying meat and to baking bread and cakes. The fan distributes the heat and the steam evenly throughout the cooking compartment. Notes <ul style="list-style-type: none">Only use when the water tank is full.Observe the information on steam, filling the water tank , emptying the water tank  and descaling . → "Steam", Page 13 → "Descaling", Page 21 |

Other functions


This is where you can find an overview of other functions on the function selector or in the menu of your appliance.

| Symbol | Function | Use |
|--|------------|---|
|  | Lighting | Light up the cooking compartment without heating. → "Lighting", Page 9 |
|  | Programmes | Use programmed setting values for various types of food. → "Programmes", Page 15 |


4.4 Temperature and setting levels

There are different settings for the types of heating and functions.
The settings appear on the display.
The temperature can be set in 1 degree increments up to 100 °C, and in 5 degree increments thereafter.
Note: For grill setting 3, the appliance lowers the setting to grill setting 1 after approx. 20 minutes.

Heat-up indicator

The appliance indicates when it is heating up.
When the appliance is heating, the  symbol lights up on the display.
When you preheat the appliance, the optimal time to place your food in the cooking compartment is when the symbol goes out.

Notes


- The heat-up indicator only appears for types of heating for which a temperature is set. The heat-up indicator does not appear for grill settings, for example.
- If the temperature in the cooking compartment is too high when the appliance is started,  appears on the display for some types of heating. Switch off the appliance and allow it to cool down. Then restart the operation.
- Due to thermal inertia, the temperature displayed may differ slightly from the actual temperature inside the cooking compartment.

4.5 Cooking compartment

The functions in the cooking compartment make your appliance easier to use.

Shelf supports

The shelf supports in the cooking compartment enable you to place accessories at different heights.
Your appliance has 5 shelf positions. The shelf positions are numbered from bottom to top.
Depending on the appliance, the shelf supports are fitted with pull-out rails or clip-on pull-out rails. The pull-out rails are fixed in place and cannot be removed. The clip-on pull-out rails allow you to use them as you wish at all free shelf positions.
You can remove the shelf supports, e.g. for cleaning.
→ "Shelf supports", Page 25

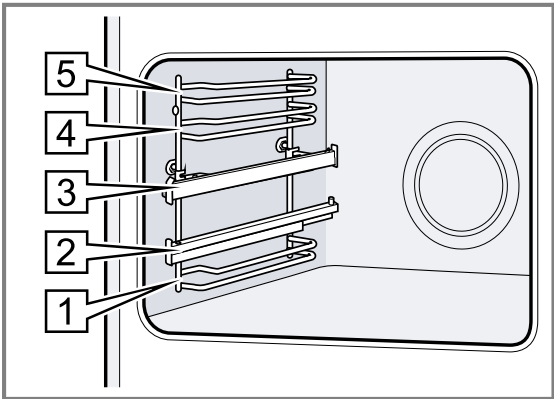

Lighting

The oven lamp lights up the cooking compartment. With most types of heating and functions, the lighting lights up during operation. The lighting goes off when operation ends.

You can use the oven light function in the menu to switch on the light without heating. After approx. 15 minutes, the light automatically switches itself off again.

Cooling fan

The cooling fan switches on automatically during operation. The hot air escapes above the door.

The appliance detects increased moisture in the cooking compartment. The intensity and operating noise of the cooling fan may vary to regulate the moisture.

ATTENTION

Covering the ventilation slots will cause the appliance to overheat.

- Do not cover the ventilation slots.

To cool down the appliance and remove residual moisture from the cooking compartment, the cooling fan runs for a certain time after operation.

Note: You can change the run-on time in the basic settings. If you frequently prepare very moist food or keep it warm in the cooking compartment, set a longer run-on time.

→ "Basic settings", Page 17

Appliance door




If you open the appliance door during operation, the operation continues.

5 Accessories

Use original accessories. These have been made especially for your appliance.

Note: Accessories may become deformed if they get hot. Deformation has no effect on function. As the accessory cools down, it will regain its original shape.

The accessories supplied may differ depending on the appliance model.
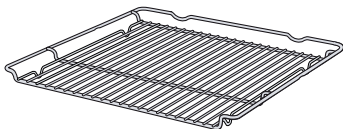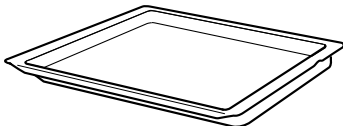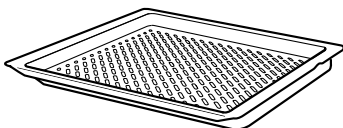
| Accessories | | Use |
|---|---|---|
| Wire rack |  | <ul style="list-style-type: none"> ■ Cake tins ■ Ovenproof dishes ■ Tableware ■ Meat, e.g. roasting joints or steak ■ Frozen meals |
| Universal pan |  | <ul style="list-style-type: none"> ■ Moist cakes ■ Baked items ■ Bread ■ Large roasts ■ Frozen meals ■ Catching dripping liquids, e.g. fat when grilling food on the wire rack. |
| Air Fry & Grill Tray, enamelled, perforated |  | <ul style="list-style-type: none"> ■ Bake until crispy, for food that is usually fried in oil, e.g. chips. ■ Grilling food. |


5.1 Locking function

The locking function prevents the accessories from tilting when they are pulled out.

You can pull out the accessories approximately halfway without them tipping. The accessories must be inserted into the cooking compartment correctly for the tilt protection to work properly.


5.2 Sliding accessories into the cooking compartment

Always slide the accessory into the cooking compartment the right way round. This is the only way to ensure that accessories can be pulled out approximately halfway without tipping.


1. Turn the accessories so that the notch  is at the rear and is facing downwards.


2. Insert the accessory between the two guide rods for a shelf position.

Pan support Insert the wire rack with the open side facing the appliance door and the curved lip — facing downwards.

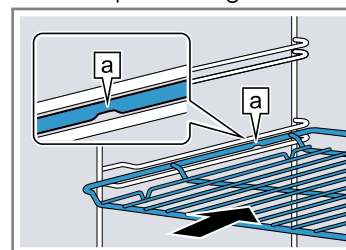


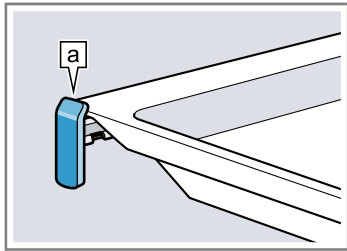
Tray
E.g. universal pan or baking tray

Slide the tray in with the sloping edge  towards the appliance door.

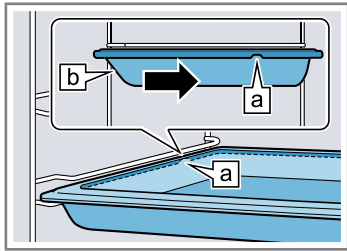

Place the accessories on the inserted pull-out rails.

Wire rack or baking tray Position the accessory so that its edge is behind the lug  on the pull-out rail.




Note: The pull-out rails lock in place when they are fully pulled out. Gently push the pull-out rails back into the cooking compartment.

3. Push the accessory all the way in, making sure that it does not touch the appliance door.


Note: Take any accessories that you will not be using out of the cooking compartment while the appliance is in operation.

Combining accessories

You can combine the wire rack with the universal pan to catch any liquid that drips down.

1. Place the wire rack on the universal pan so that both spacers  are on the rear edge of the universal pan.
2. Insert the universal pan between the two guide rods for a shelf position. In so doing, the wire rack is on top of the upper guide rod.

Wire rack on universal pan

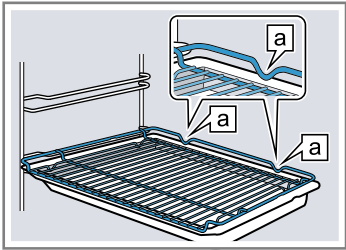

5.3 Other accessories

You can purchase other accessories from our customer service, specialist retailers or online.

You will find a comprehensive range of products for your appliance in our brochures and online:

www.bosch-home.com

Accessories are appliance-specific. When purchasing accessories, always quote the exact product number (E no.) of your appliance.

You can find out which accessories are available for your appliance in our online shop or from our customer service.

6 Before using for the first time




Configure the settings for initial start-up. Clean the appliance and accessories.

6.1 Initial use

You need to make settings for initial use before you can use your appliance.

Setting the time on the clock

Once the appliance has been connected to the mains or following a power failure, the time flashes on the display. The time starts at "12:00". Set the current time.

1. Use the  or  button to set the time.
 2. Press the  button.
- ✓ The time that is set appears in the display.

Setting the water hardness

ATTENTION

If the wrong water hardness has been set, the steam function is impaired and appliance cannot remind you to descale it at the right time.

- Set the water hardness correctly.

Using unsuitable liquids may damage the appliance.

- Do not use distilled water or other liquids.

- Only use cold, fresh tap water, softened water or non-carbonated mineral water.

Requirement: Before you set the water hardness, ask your water supplier about the hardness of your tap water.

1. Change the water hardness basic setting.

- You can find out how to change basic settings in the section Basic settings → *Page 17*.

Note: If your tap water is very hard, we recommend that you use softened water.

| Water hardness basic setting | Water hardness in mmol/l | German hardness °dH | French hardness °fH |
|------------------------------|--------------------------|---------------------|---------------------|
| 0 = softened ¹ | - | - | - |
| 1 = soft | Up to 1.5 | Up to 8.4 | Up to 15 |
| 2 = medium | 1.5-2.5 | 8.4-14 | 15-25 |
| 3 = hard | 2.5-3.8 | 14-21.3 | 25-38 |
| 4 = very hard ² | Over 3.8 | Above 21.3 | Over 38 |

2. Confirm the change to the basic setting.

¹ Only set this if you will be using solely softened water.

² Also set for mineral water. Only use non-carbonated mineral water.

6.2 Cleaning the appliance before using it for the first time

Before using the appliance to cook food for the first time, you must clean the cooking compartment and accessories.

1. Remove the product information and the accessories from the cooking compartment. Remove any leftover packaging, such as polystyrene pellets, and any adhesive tape that is in or on the appliance.
2. Wipe the smooth surfaces in the cooking compartment with a soft, damp cloth.
3. Fill the water tank.
→ "Filling the water tank", Page 13
4. Set the type of heating with steam assistance and the temperature.
→ "Basic operation", Page 11


→ "Steam", Page 13

| | |
|-----------------|------------------|
| Type of heating | Steam assistance |
| Temperature | 200 °C |
| Duration | 30 minutes |

5. Ventilate the kitchen while the appliance is heating.
6. Switch off the appliance after the specified cooking time.
7. Once the appliance has cooled down, clean the smooth surfaces in the cooking compartment with a detergent solution and a dish cloth.
8. Clean the accessories with soapy water and a dish cloth or soft brush.
9. Empty the water tank and dry the cooking compartment.
→ "After using steam operation", Page 14

7 Basic operation

7.1 Switching the appliance on and off

- ▶ To switch the appliance on or off, press the  button.




7.2 Starting the operation

You must start each operation.


- ▶ Press  to start the operation.



7.3 Pausing or cancelling operation

You can briefly interrupt the operation and then continue again. If you cancel the operation completely, the settings are reset.

1. To interrupt the operation briefly:
 - ▶ Briefly press .
 - ▶ Press  again to resume the operation.
2. To cancel operation completely, press and hold  for approx. 3 seconds.

7.4 Setting the type of heating and temperature



Requirement: The menu for types of heating  is selected.

1. Use — or + to set the type of heating.
2. Press .
3. Use — or + to set the temperature or grill setting.
4. Press  to start the operation.
- ✓ The appliance starts heating.
5. When your food is ready, switch off the appliance.

Tip: The most suitable type of heating for your food can be found in the description of the type of heating.
→ "Types of heating and functions", Page 7

Changing the type of heating

You can change the type of heating at any time. Operation is stopped.

1. Press .
2. Use — or + to change the type of heating.
3. Press  to start the operation.

Changing the temperature

You can change the temperature at any time.

- ▶ Use — or + to change the temperature or grill setting.
- ✓ The appliance applies the change after a few seconds.

8 Rapid heating

To save time, you can use rapid heating to shorten the preheat time.






8.1 Setting rapid heating

To ensure an even cooking result, do not place the food in the cooking compartment until rapid heating has come to an end.

Note: Do not set a cooking time until rapid heating has come to an end.

1. Set a suitable type of heating.


Suitable heating functions include:





- 3D hot air 
 - Top/bottom heating 
2. Set a temperature of 100 °C and above.
Rapid heating automatically switches on at temperatures of 200 °C and above.
 3. If rapid heating does not switch off automatically, press the  button.
 - ✓  appears on the display.
 - ✓ Rapid heating starts after a few seconds.
 - ✓ Once rapid heating has ended, a signal tone sounds and the  symbol goes out on the display.
 4. Place the food in the cooking compartment.

9 Time-setting options

Your appliance has different time-setting options, with which you can control its operation.





9.1 Overview of the time-setting options



Use the  button to select the different time-setting options.

| Time-setting option | Use |
|--|---|
| Timer  | You can set the timer to run independently of the operation. It does not affect the appliance. |
| Cooking time  | If you set a cooking time, the appliance stops heating automatically once this time has elapsed. |
| End  | For the cooking time, you can set the time at which you want the operation to end. The appliance starts up automatically so that the operation finishes at the required time. |
| Time  | You can set the time. |

9.2 Setting the timer

The timer runs independently during the operation. You can set the timer to times of up to 23 hours and 59 minutes, regardless of whether the appliance is on or off. The timer has its own signal so that you can tell whether it is the timer or a cooking time that has elapsed.


- 1. Press the  button repeatedly until  is highlighted on the display.
- 2. Use the  or  button to set the timer duration.



| Button | Default value |
|---|---------------|
|  | 5 minutes |
|  | 10 minutes |

The timer duration can be set in 30-second increments up to 10 minutes. The time increments then become bigger as the value increases.


- ✓ The timer starts and the timer duration begins to count down after a few seconds.
- ✓ An audible signal sounds and the timer duration is zero in the display when the timer duration has elapsed.
- 3. Press any button to switch off the timer.



Changing the timer

You can change the timer duration at any time.
Requirement:  is highlighted in the display.

- ▶ Use the  or  button to change the timer duration.
- ✓ The appliance applies the change after a few seconds.

Cancelling the timer





You can cancel the timer duration at any time.
Requirement:  is highlighted in the display.



- ▶ Use the  button to reset the timer duration to zero.
- ✓ After a few seconds, the appliance applies the change and  goes out.

9.3 Setting the cooking time



You can set the cooking time for operation of up to 23 hours 59 minutes.

Requirement: The type of heating and a temperature or setting have been set.


- 1. Press the  button repeatedly until  is highlighted on the display.
- 2. Use the  or  button to set the time.



| Button | Default value |
|---|---------------|
|  | 10 minutes |
|  | 30 minutes |

The cooking time can be set in one-minute increments up to one hour, and then in five-minute increments.


- 3. Press  to start the operation.
- ✓ The appliance starts heating.
- ✓ When the cooking time has elapsed, a signal sounds and the duration is at zero on the display.
- 4. Once the cooking time has elapsed:
 - ▶ Press any button to end the signal prematurely.
 - ▶ To set another cooking time, press the  button.
 - ▶ When your food is ready, switch off the appliance.


Changing the cooking time

You can change the cooking time at any time.
Requirement:  is highlighted in the display.

- ▶ Change the cooking time using the  or  button.
- ✓ The appliance applies the change after a few seconds.

Cancelling the cooking time

You can cancel the cooking time at any time.
Requirement:  is highlighted in the display.

- ▶ Reset the cooking time to zero using the  button.
- ✓ After a few seconds, the appliance applies the change and continues to heat without a cooking time.

9.4 Setting the end time

You can delay the time at which cooking is due to finish by up to 23 hours and 59 minutes.

- Notes**
- The end time cannot be set for types of heating with grill function.
 - In order to achieve a good cooking result, do not delay the end time once the appliance is already in operation.
 - Food will spoil if you leave it in the cooking compartment too long.

- Requirements**
- The type of heating and a temperature or setting have been set.
 - A cooking time is set.

1. Press the \odot button repeatedly until \rightarrow is highlighted in the display.
2. Press the $-$ or $+$ button.
 - ✓ The display shows the calculated end time.
3. Use the $-$ or $+$ button to delay the end time.
4. Press start stop to start the operation.
 - ✓ The display shows the set end time.
 - ✓ Once the calculated start time is reached, the appliance starts heating up and the cooking time counts down.
 - ✓ When the cooking time has elapsed, a signal sounds and the duration is at zero on the display.
5. Once the cooking time has elapsed:
 - ▶ Press any button to end the signal prematurely.
 - ▶ To set another cooking time, press the $+$ button.
 - ▶ When your food is ready, switch off the appliance.

Changing the end time

In order to achieve a good cooking result, you can only change the set end time before operation starts and the cooking time starts counting down.

Requirement: \rightarrow is highlighted on the display.

- ▶ Use the $-$ or $+$ button to delay the end time.
- ✓ The appliance applies the change after a few seconds.

Cancelling the end time

You can delete the set end time at any time.

Requirement: \rightarrow is highlighted on the display.

- ▶ Reset the end time to the current time plus the set cooking time using the $-$ button.
- ✓ After a few seconds, the appliance applies the change and starts heating up. The cooking time counts down.

9.5 Setting the time on the clock

Once the appliance has been connected to the mains or following a power failure, the time flashes on the display. The time starts at "12:00". Set the current time.

1. Use the $-$ or $+$ button to set the time.
2. Press the \odot button.
- ✓ The time that is set appears in the display.

Changing the time on the clock

You can change the time on the clock at any time.

Requirement: The appliance must be switched off.

1. Press the \odot button repeatedly until \odot is highlighted on the display.
2. Use the $-$ or $+$ button to change the time.
- ✓ The appliance applies the change after a few seconds.

10 Steam

Food can be cooked particularly gently using steam.

⚠ WARNING – Risk of scalding!

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ Open the appliance door carefully.
- ▶ Keep children at a safe distance.

⚠ WARNING – Risk of burns!

The water tank may heat up while the appliance is in operation.

- ▶ Wait until the water tank has cooled down from the previous operation.
- ▶ Remove the water tank from the tank recess.

10.1 Before using the steam function

Before using the steam function each time, make sure that your appliance is supplied with sufficient water.

Filling the water tank

⚠ WARNING – Risk of fire!

Due to the hot surfaces, vapours from flammable liquids may catch fire in the cooking compartment (explosion). The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Do not pour flammable liquids (e.g. alcoholic drinks) into the water tank.
- ▶ Only fill the water tank with water or with the descaling solution we have recommended.

⚠ WARNING – Risk of burns!


The water tank may heat up while the appliance is in operation.

- ▶ Wait until the water tank has cooled down from the previous operation.
- ▶ Remove the water tank from the tank recess.

Requirement: The water hardness has now been set correctly.


→ "Setting the water hardness", Page 10

1. Press on the water tank ① and pull the water tank out ②.

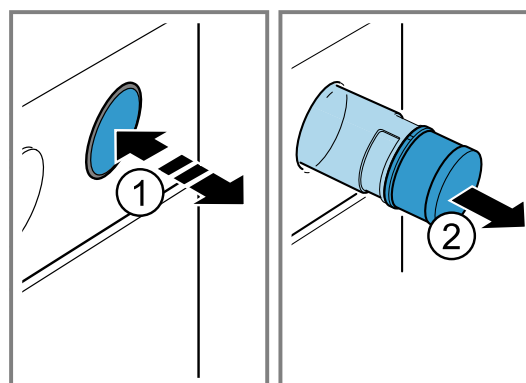


2. Press on the water tank lid ① and unscrew it ②.

3. Fill the water tank with water up to the mark ③.

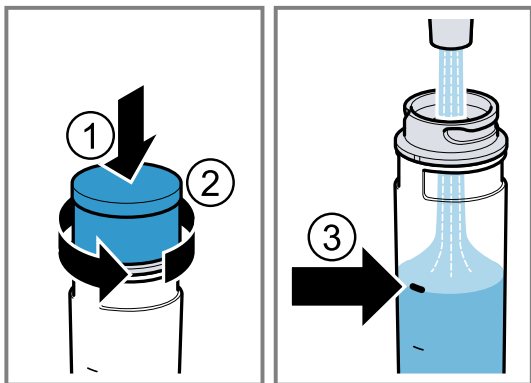

4. Press on the water tank lid ① and screw it on ②.
5. Place the water tank back in the opening and press it down until it clicks into place ③.

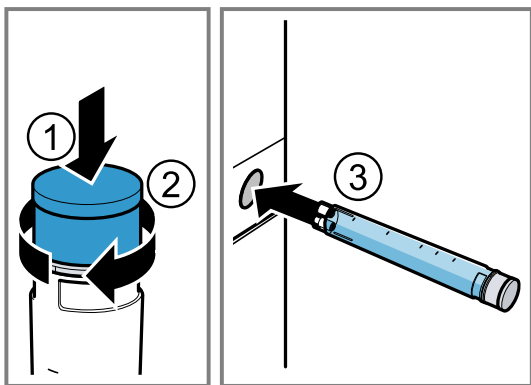

10.2 Steam assistance

When you cook with steam assistance, the appliance introduces steam into the cooking compartment at various intervals. This gives your food a crispy crust and a glossy surface. Meat stays juicy, tender and only undergoes a minimum reduction in volume.

Setting steam-assisted cooking

Requirements

- The water tank has been filled.
→ "Before using the steam function", Page 13
- The menu for types of heating is selected.
- 1. Setting steam-assisted cooking with – or +.
- 2. Press °C/kg.
- 3. Set a temperature between 80 °C and 240 °C using – or +.
- 4. Press to start the operation.
- ✓ The appliance starts to heat and produce steam.
- 5. When the food is ready, switch off the appliance.
- 6. Dry the cooking compartment.

→ "After using steam operation", Page 14

10.3 After using steam operation

Dry the appliance after each steam operation.

Note: Observe the information on cleaning.

→ "Cleaning and servicing", Page 18

Emptying the water tank

⚠ WARNING – Risk of burns!

The water tank may heat up while the appliance is in operation.

- ▶ Wait until the water tank has cooled down from the previous operation.
- ▶ Remove the water tank from the tank recess.

ATTENTION

Drying the water tank in the hot cooking compartment leads to damage to the water tank.

- ▶ Do not dry the water tank in the hot cooking compartment.

Cleaning the water tank in the dishwasher will damage it.

- ▶ Do not clean the water tank in the dishwasher.
- ▶ Clean the water tank with a soft cloth and standard washing-up liquid.

1. Press on the water tank.
2. Pull out the water tank.
3. Unscrew the lid on the water tank.
4. Empty the water tank, clean it with detergent and then rinse it thoroughly with clean water.
5. Dry all parts with a soft cloth.
6. Rub the seal on the lid until dry.
7. Leave the water tank to dry with the lid open.
8. Place the lid on the water tank and screw it on.
9. Insert the water tank.

Drying the drip trough


⚠ WARNING – Risk of burns!

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

Requirement: The cooking compartment has cooled down.

1. Open the appliance door.
2. **Note:** The drip trough is underneath the cooking compartment.

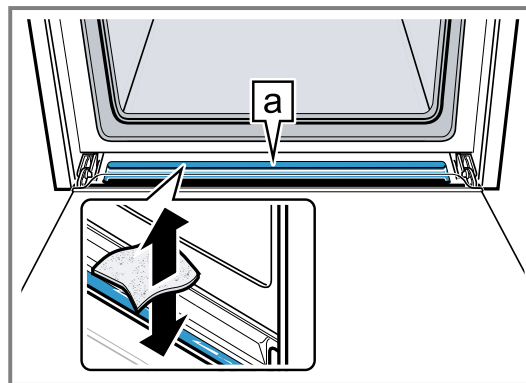

Soak up the water in the drip trough with a sponge cloth and wipe it carefully.

Drying the cooking compartment

ATTENTION

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 °C, this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.

Requirement: The appliance has cooled down.

1. Dry the cooking compartment with a sponge or a soft cloth.

2. Remove any limescale marks with a cloth soaked in vinegar, then wipe with clean water and dry with a soft cloth.

3. Leave the appliance door open for 1 hour so that the cooking compartment dries completely.

11 Programmes

The programmes help you to use your appliance to prepare different dishes by selecting the optimum settings automatically.

11.1 Cookware for programmes

You should therefore use heat-resistant cookware that is suitable for temperatures up to 300 °C.

Glass or glass ceramic cookware is best. The joint should cover approx. two thirds of the cookware base.

Cookware made from the following material is not suitable:

- Bright, shiny aluminium
- Unglazed clay
- Plastic or plastic handles

11.2 Settings for programmes

The appliance selects the optimal type of heating, temperature and cooking time.

To achieve an optimal cooking result, you only have to set the weight of your meal.

Note: The cooking result depends on the quality and composition of the food. Use fresh and, ideally, chilled food.

Steam programmes

In some programmes, the appliance automatically uses steam-assisted cooking.

The programmes with steam-assisted cooking are marked in the programme table. Observe the information on operating with steam.

→ "Steam", Page 13

11.3 Programme table

The programme numbers are assigned to specific foods.


| No | Food | Tableware | Weight setting | Add liquid | Shelf position | Information |
|----|---|------------------------------------|----------------------|---|----------------|--|
| 01 | Wheat bread, multi-grain wheat bread on a baking tray ¹ | Baking tray with greaseproof paper | Weight of dough | No | 2 | The cooking compartment must be cold to begin with |
| 02 | Flatbread ¹ | Baking tray with greaseproof paper | Weight of dough | No | 3 | The cooking compartment must be cold to begin with |
| 03 | Reheating plated meals ¹ Warming up | Dish on combination grid | Weight of the meal | No | 2 | The cooking compartment must be cold to begin with |
| 04 | Reheating pizza ¹ Warming up | Pan support | Pizza weight | No | 2 | The cooking compartment must be cold to begin with |
| 05 | Proving yeast dough ¹ | Bowl on wire rack | Weight of dough | No | 2 | The cooking compartment must be cold to begin with |
| 06 | Chicken, unstuffed Ready to cook, seasoned | Roasting dish with glass lid | Chicken weight | No | 2 | Place in the cookware with the breast facing up |
| 07 | Turkey breast Whole, seasoned | Roasting dish with glass lid | Turkey breast weight | Cover the bottom of the roasting dish, and add up to 250 g vegetables if required | 2 | Do not sear the meat beforehand |


¹ Dampfprogramm (Betrieb nur mit gefülltem Wassertank)



| No | Food | Tableware | Weight setting | Add liquid | Shelf position | Information |
|----|---|------------------------------|---|---|----------------|--|
| 08 | Vegetable stew Vegetarian | Deep roasting dish with lid | Total weight | As per recipe | 2 | Cut vegetables that take longer to cook (e.g. carrots) into smaller pieces than vegetables that take less time to cook (e.g. tomatoes) |
| 09 | Goulash Diced beef or pork, with vegetables | Deep roasting dish with lid | Total weight | As per recipe | 2 | Place the meat at the bottom and cover with vegetables Do not sear the meat beforehand |
| 10 | Meat loaf, fresh Minced beef, pork or lamb | Roasting dish with lid | Weight of joint | No | 2 | - |
| 11 | Pot-roasted beef E.g. prime rib, shoulder, rump or marinated beef roast | Roasting dish with lid | Weight of meat | Almost cover the meat with liquid | 2 | Do not sear the meat beforehand |
| 12 | Beef roulades Stuffed with vegetables or meat | Roasting dish with lid | Total weight of all of the stuffed roulades | Add stock, water or another liquid to the dish until the beef olives are almost covered | 2 | Do not sear the meat beforehand |
| 13 | Leg of lamb, well-done Boned, seasoned | Roasting dish with lid | Weight of meat | Cover the bottom of the roasting dish, and add up to 250 g vegetables if required | 2 | Do not sear the meat beforehand |
| 14 | Joint of veal, lean E.g. tenderloin or eye | Roasting dish with lid | Weight of meat | Cover the bottom of the roasting dish, and add up to 250 g vegetables if required | 2 | Do not sear the meat beforehand |
| 15 | Pork neck joint Boned, seasoned | Roasting dish with glass lid | Weight of meat | Cover the bottom of the roasting dish, and add up to 250 g vegetables if required | 2 | Do not sear the meat beforehand |

11.4 Setting a programme

Note: After the programme starts, you can no longer change the programme and the weight.

Requirement: The menu for types of heating  is selected.

1. Set Programmes  with – or +.
2. Press the °C/kg button.
3. Use the – or + button to set the required programme.
4. Press the °C/kg button.

5. Use the – or + button to set the weight of your food. Always round up to the nearest weight. You can set the weight only in the intended range.
To call up the programme's cooking time, press the  button. The duration cannot be changed.
6. Use  to start the programme.
 - ✓ The appliance starts to heat and the cooking time counts down.
 - ✓ If the programme has ended, an audible signal sounds and the display shows the cooking time as zero.

7. When the programme ends:






- ▶ Press any button to end the signal prematurely.

- ▶ To set a cooking time for further cooking, press the + button. The appliance will resume heating using the programme settings.
- ▶ When your food is ready, switch off the appliance.

12 Childproof lock

You can secure your appliance to prevent children from accidentally switching it on or changing the settings.

12.1 Activating and deactivating the childproof lock

1. Press and hold the  button until  appears on the display.
- ✓ The control panel is locked. The appliance can only be switched off using .
2. To deactivate the childproof lock, press and hold the  button until  goes out in the display.

13 Basic settings

You can configure the basic settings for your appliance to meet your needs.

13.1 Overview of the basic settings

Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

| Indicator | Basic setting | Selection |
|-----------|---|---|
| c1 | Signal duration upon completion of a cooking time or timer period | 1 = 10 seconds 2 = 30 seconds ¹ 3 = 2 minutes |
| c2 | Waiting time until a setting is adopted | 1 = 3 seconds ¹ 2 = 6 seconds 3 = 10 seconds |
| c3 | Button tone when pressing a button | 0 = off 1 = on ¹ |
| c4 | Brightness of the display illumination | 1 = dark 2 = medium 3 = bright ¹ |
| c5 | Time display | 0 = hide the time 1 = display the time ¹ |
| c6 | Childproof lock can be adjusted | 0 = no 1 = Yes ¹ 2 = yes, with door lock |
| c7 | Interior lighting during operation | 0 = no 1 = Yes ¹ |
| c8 | Cooling fan run-on time | 1 = short 2 = medium ¹ 3 = long 4 = extra long |
| c9 | Telescopic shelves retrofitted ² | 0 = no ¹ (for rails and 1-level pull-out) 1 = yes (for 2- and 3-level pull-out) |
| cb | Water hardness | 0 = softened 1 = soft (up to 1.5 mmol/l) 2 = medium (1.5 - 2.5 mmol/l) 3 = hard (2.5 - 3.8 mmol/l) |

¹ Factory setting (may vary according to model)

² Depending on the appliance specifications

| Indicator | Basic setting | Selection |
|-----------|--------------------------------------|---|
| | | 4 = very hard (above 3.8 mmol/l) ¹ |
| cR | Automatic rapid heating from 200 °C | ⏻ = No ! = Yes ¹ |
| cc | Reset all values to factory settings | ⏻ = No ¹ ! = Yes |

13.2 Changing basic settings

Requirement: The appliance is switched off.

1. Press and hold the ⏻ button for approx. 4 seconds.
✓ The first basic setting appears on the display, e.g. c! !.
2. Use the – or + button to change the setting.
3. Use the ⏻ button to switch to the next basic setting.

4. To save the changes, press and hold the ⏻ button for approx. 4 seconds.

Note: Your changes to the basic settings will be retained even after a power cut.

Discarding changes to the basic settings

- ▶ Press ⏻ to switch the appliance on and off.
- ✓ All changes are discarded and not saved.

14 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

14.1 Cleaning products

In order to avoid damaging the various oven surfaces on the appliance, do not use unsuitable cleaning products.

⚠ WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

ATTENTION

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive cleaning products.

- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Do not use any special cleaners for cleaning the appliance while it is hot.

Using oven cleaner in a hot cooking compartment damages the enamel.

- ▶ Never use oven cleaner in the cooking compartment when it is still warm.
- ▶ Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance.

New sponge cloths contain residues from production.

- ▶ Wash new sponge cloths thoroughly before use.

14.2 Suitable cleaning agents

Only use cleaning agents that are suitable for the different surfaces on your appliance. Follow the instructions on cleaning the appliance.

Appliance front

| Surface | Suitable cleaning agents | Information |
|---|--|---|
| Stainless steel | <ul style="list-style-type: none"> ▪ Hot soapy water ▪ Special stainless steel cleaning products suitable for hot surfaces | To prevent corrosion, remove any patches of limescale, grease, starch or albumin (e.g. egg white) from stainless steel surfaces immediately. Apply a thin layer of the stainless steel cleaning product. |
| Plastic or painted surfaces E.g. control panel | <ul style="list-style-type: none"> ▪ Hot soapy water | Do not use glass cleaner or a glass scraper. |

Appliance door

| Range | Suitable cleaning agents | Information |
|-------------|---|---|
| Door panels | <ul style="list-style-type: none"> ▪ Hot soapy water ▪ Steel wool | Do not use a glass scraper. Tip: Remove the door panels in order to clean them thoroughly. → "Appliance door", Page 22 |

¹ Factory setting (may vary according to model)

| Range | Suitable cleaning agents | Information |
|-------------|--|--|
| Door cover | <ul style="list-style-type: none"> ■ Made of stainless steel: Stainless steel cleaner ■ Made of plastic: Hot soapy water | <p>Do not use glass cleaner or a glass scraper.</p> <p>Tip: Remove the door cover for thorough cleaning. → <i>"Appliance door", Page 22</i></p> |
| Door handle | <ul style="list-style-type: none"> ■ Hot soapy water | To avoid permanent stains, remove descaling agents from the door handle immediately. |

Cooking compartment

| Range | Suitable cleaning agents | Information |
|--------------------------------|---|--|
| Enamel surfaces | <ul style="list-style-type: none"> ■ Hot soapy water ■ Vinegar solution ■ Oven cleaner ■ Steel wool | <p>Soak any heavily soiled areas and use a brush or steel wool. Leave the appliance door open to dry the cooking compartment after cleaning it.</p> <p>Tip: It is best to use the cleaning function. → <i>"Pyrolytic self-cleaning", Page 20</i></p> <p>Notes</p> <ul style="list-style-type: none"> ■ Enamel burns at very high temperatures, causing minor discolouration. The functionality of your appliance is not affected by this. ■ The edges of thin trays cannot be completely enamelled and may be rough. This does not impair the corrosion protection. ■ Food residues leave a white coating on the enamel surfaces. The coating does not pose a health risk. The functionality of your appliance is not affected by this. You can remove residues with lemon juice. |
| Glass cover for the oven light | <ul style="list-style-type: none"> ■ Hot soapy water | Use oven cleaner to remove very heavy soiling. |
| Shelf supports | <ul style="list-style-type: none"> ■ Hot soapy water ■ Steel wool | <p>Soak any heavily soiled areas and use a brush or steel wool.</p> <p>Tip: Remove the shelf supports for cleaning. → <i>"Shelf supports", Page 25</i></p> |
| Pull-out system | <ul style="list-style-type: none"> ■ Hot soapy water | <p>Use a brush to remove heavy soiling. Clean the pull-out rails while they are pushed in so that you do not remove the lubricant. Do not clean in the dishwasher.</p> <p>Tip: Detach the pull-out system for cleaning. → <i>"Shelf supports", Page 25</i></p> |
| Accessories | <ul style="list-style-type: none"> ■ Hot soapy water ■ Oven cleaner ■ Steel wool | <p>Soak any heavily soiled areas and use a brush or steel wool. Enamelled accessories are dishwasher-safe.</p> |
| Water tank | <ul style="list-style-type: none"> ■ Hot soapy water | <p>To remove residual detergent after cleaning, rinse thoroughly with clean water.</p> <p>To dry the water tank after cleaning, leave the water tank to dry with the lid open. Dry the seal on the lid.</p> <p>Do not clean in the dishwasher.</p> |

14.3 Cleaning the appliance

In order to avoid damaging the appliance, you must clean your appliance only as specified, and with suitable cleaning products.

⚠ **WARNING – Risk of burns!**

The appliance becomes hot during operation.

- Allow the appliance to cool down before cleaning.

⚠ **WARNING – Risk of fire!**

Loose food remnants, fat and meat juices may catch fire.


- Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

Requirement: Read the information on cleaning agents.

→ *"Cleaning products", Page 18*

1. Clean the appliance using hot soapy water and a dish cloth.
 - For some surfaces, you can use alternative cleaning agents.
→ *"Suitable cleaning agents", Page 18*
2. Dry with a soft cloth.

15 Pyrolytic self-cleaning

With the Pyrolytic self-cleaning  cleaning function, the cooking compartment is cleaned virtually automatically. Use the cleaning function to clean the cooking compartment every two to three months. You can use the cleaning function more often, if required.

The cleaning function requires approx. 2.5–4.8 kilowatt hours.

15.1 Preparing the appliance for the cleaning function

In order to achieve a good cleaning result, prepare the appliance carefully.

WARNING – Risk of fire!

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Loose food remnants, fat and meat juices may catch fire when the cleaning function is in progress.

- ▶ Before you start the cleaning function, always remove coarse dirt from the cooking compartment.
- ▶ Never clean accessories at the same time.

The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never hang combustible objects, e.g. tea towels, on the door handle.
- ▶ Leave the front of the appliance clear.
- ▶ Keep children at a safe distance.

If the door seal is damaged, a large amount of heat is generated around the door.

- ▶ Do not scrub or remove the seal.
- ▶ Never operate the appliance if the seal is damaged or missing.

1. Remove accessories and cookware from the cooking compartment.
2. Unhook the shelf supports and remove them from the cooking compartment.
→ "Shelf supports", Page 25
3. Remove coarse dirt from the cooking compartment. Coarse dirt may burn on, making it difficult to remove.
4. Use a detergent solution and a soft cloth to clean the surfaces at the edges of the cooking compartment around the door seal.
Do not remove or scrub the door seal.
Use oven cleaner to remove stubborn dirt from the inner door pane.
5. Remove any objects from the cooking compartment. The cooking compartment must be empty.

15.2 Setting the cleaning function

Ventilate the kitchen while the cleaning function is running.

WARNING – Risk of harm to health!

The cleaning function heats up the cooking compartment to a very high temperature so that food left over from roasting, grilling and baking will burn off. This pro-


cess releases vapours, which can irritate mucous membranes.

- ▶ Keep the kitchen well ventilated while the cleaning function is running.
- ▶ Do not remain in the room for long periods.
- ▶ Keep children and pets away.

WARNING – Risk of burns!

The cooking compartment gets very hot when the cleaning function is in progress.



- ▶ Never open the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children at a safe distance.

 The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never touch the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children at a safe distance.

Note: The oven light does not light up while the cleaning function is running.




Requirement: Prepare the appliance for the cleaning function. → Page 20

1. Press the  button repeatedly until Pyrolytic self-cleaning  is highlighted on the display.
2. Use the – or + button to set the cleaning level.

| Cleaning setting | Cleaning level | Duration in hours |
|------------------|----------------|-------------------|
| 1 | Low | Approx. 1:15 |
| 2 | Medium | Approx. 1:30 |
| 3 | High | Approx. 2:00 |

Select a higher cleaning setting if the cooking compartment is particularly dirty or has not been cleaned for a while.

The duration cannot be changed.

3. Press  to start the operation.
 - ✓ The cleaning function starts and the duration counts down.
 - ✓ For your safety, the appliance door locks once a certain temperature is reached in the cooking compartment.  appears on the display.
 - ✓ When the cleaning function ends, a signal tone sounds and the duration is at zero on the display.
4. Switch off the appliance.
When the appliance has cooled down sufficiently, the appliance door is unlocked and  goes out.
5. Prepare the appliance for use. → Page 20

15.3 Preparing the appliance for use following the cleaning function

1. Allow the appliance to cool down.
2. Wipe off any ash that has been left behind in the cooking compartment and around the appliance door.
→ "Cleaning and servicing", Page 18

3. Remove white residues with lemon juice.

Note: White residues on the enamel surfaces may be caused by heavy soiling. These food residues are

harmless. The deposits do not compromise the functionality of the appliance.

4. Attach the shelf supports.
→ "Shelf supports", Page 25

16 Cleaning aid

The Cleaning aid is a quick alternative for occasionally cleaning the cooking compartment. The cleaning aid softens dirt by evaporating the soapy water. It is then easier to remove the dirt.




16.1 Setting the cleaning aid

WARNING – Risk of scalding!

If there is water in the cooking compartment when it is hot, this may create hot steam.

- ▶ Never pour water into the cooking compartment when the cooking compartment is hot.

Requirement: The cooking compartment must have cooled down completely.

1. Remove any accessories from the cooking compartment.
2. Mix 0.4 litres water with a drop of washing-up liquid and pour into the centre of the cooking compartment floor. Close the appliance door.
Do not use distilled water.
3. Press the  button repeatedly until Cleaning aid  is highlighted on the display.
 - ✓ The display shows the duration. The duration cannot be changed.
4. Press  to start the operation.
 - ✓ The cleaning aid starts and the duration counts down.
 - ✓ Once the cleaning assistance has ended, a signal tone sounds and the display shows the cooking time as zero.

5. Switch off the appliance and leave the cooking compartment to cool down for approx. 20 minutes.


16.2 Cleaning the cooking compartment after using the cleaning aid

ATTENTION


The prolonged presence of moisture in the cooking compartment leads to corrosion.

- ▶ After using the cleaning assistance, wipe the cooking compartment and allow it to dry completely.

Requirement: The cooking compartment has cooled down.

1. Wipe out the remaining water in the cooking compartment using an absorbent sponge cloth.
2. Clean the smooth enamel surfaces in the cooking compartment with a dish cloth or a soft brush. Remove stubborn food remnants using a stainless steel scouring pad.
3. Remove limescale with a cloth soaked in vinegar, and wipe this away with clean water.
4. Dry the cooking compartment with a soft cloth.
5. Once the cooking compartment is sufficiently clean:
 - ▶ In order to dry the cooking compartment, leave the appliance door open in the detent position (approx. 30°) for approx. 1 hour.
 - ▶ To dry the cooking compartment quickly, heat up the appliance for approx. 5 minutes at 3D hot air  and 50 °C while the door is open.

17 Descaling

Regular descaling  is necessary to ensure that your appliance continues to operate correctly.

How frequently you need to run the descaling programme depends on the water hardness and how many times you have used the steam-assisted operations. When you can only use the steam function 5 more times (or fewer), the symbol appears on the display, reminding you to descale it. If you do not carry out descaling, you can no longer set any operation with steam.

Descaling comprises several steps which are shown in the display and takes approximately 80 - 110 minutes:

- Step 1: Descaling (approx. 60 minutes)
- Step 2: First rinse cycle (approx. 8 minutes)
- Step 3: Second rinse cycle (approx. 8 minutes)
- Step 4: Third rinse cycle (approx. 8 minutes)

For reasons of hygiene, the descaling programme must be run in full. If descaling is interrupted, you can no longer set any operation.

17.1 Preparing descaling

ATTENTION

The length of time for which the descaler is left to work is based on the recommended, liquid descaler. Other descalers may damage the appliance.

- ▶ Only use the liquid descaler recommended by us for the descaling programme.

If descaling solution comes into contact with the control panel or other delicate surfaces, it will damage them.

- ▶ Remove descaling solution immediately with water.









Note: Do not pour more than 150 ml of liquid into the water tank throughout the descaling process.

1. Mix the descaling solution:
 - 50 ml liquid descaler
 - 100 ml water
2. Remove the water tank and fill it with descaling solution.
→ "Filling the water tank", Page 13
3. Insert the water tank filled with descaling solution.

17.2 Setting the descaling programme



Requirement:




→ "Preparing descaling", Page 21

1. Press the  button repeatedly until Descaling  is highlighted on the display.
 - ✓ The display shows the duration. The duration cannot be changed.
2. Press  to start the operation.
 - ✓ The descaling programme starts and the duration counts down.
 - ✓ When descaling has finished, "Out And Fill" and  appears in the display.
3. To rinse the appliance, for each of the three rinse cycles:
 - ▶ Remove the water tank .
 - ▶ Clean the water tank thoroughly.
 - ▶ Fill the water tank with 150 ml water .
 - ▶ Insert the water tank.
- ✓ After a few seconds, or with , the rinse cycle starts and the duration counts down.
- ✓ When a rinse cycle has ended,  appears in the display.

4. Once the last rinse cycle is complete, the duration is set to zero.
 - ▶ Empty the water tank, dry it and re-insert it.
 - "Emptying the water tank", Page 14
 - ▶ Switch off the appliance.

17.3 Descaling interrupted

If descaling is interrupted, e.g. due to a power failure or because the appliance is switched off, you must rinse the appliance. The appliance is locked for other operations. The following appears in the display:  and .

1. Empty the water tank and clean thoroughly with water.
2. Insert the empty water tank.
3. Press the  button repeatedly until Descaling  is highlighted on the display.
 - ✓ The display shows the duration. The duration cannot be changed.
4. Press  to start the operation.
 - ✓ After a few seconds, the appliance pumps the remaining liquid into the water tank.
5. To rinse the steam system, run the three rinse cycles in the descaling programme.
 - "Setting the descaling programme", Page 22
6. Restart descaling.

18 Appliance door

To clean the appliance door thoroughly, you can disassemble the appliance door.

Note: Further information:



18.1 Detaching the appliance door

Note: The door handles are different depending on the appliance type.

⚠ WARNING – Risk of injury!

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ▶ Keep your hands away from the hinges. Components inside the appliance door may have sharp edges.


- ▶ Wear protective gloves.

When the hinges are not secured, they can snap shut with great force.

- ▶ Make sure that the locking levers are always either fully closed or (when detaching the oven door) fully open.


1. Open the appliance door fully .
2. Open the locking levers on the left- and right-hand hinges.

Locking levers opened

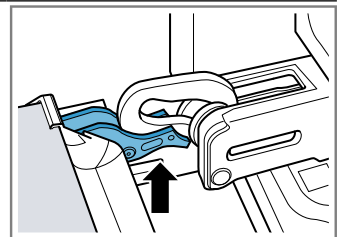

The hinge is now secured and cannot snap shut.


Locking levers closed

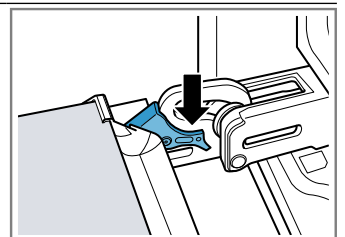

The appliance door is secured and cannot be detached.

- ✓ The locking levers are open. The hinges are now secured and cannot snap shut.

3. Close the appliance door fully ①. Grab hold of the appliance door with both hands (on the left and right) and pull it upwards and out ②.

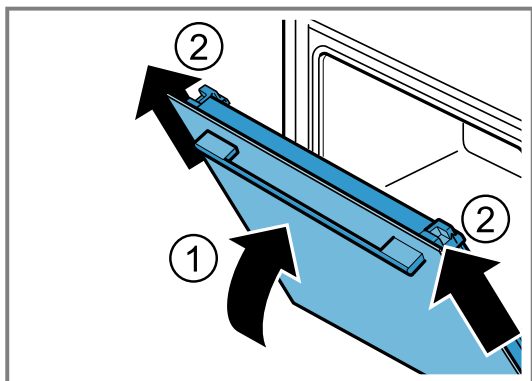

4. Carefully place the appliance door on a level surface.


18.2 Attaching the appliance door

1. ⚠ **WARNING – Risk of injury!**


The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- Keep your hands away from the hinges.

Note: Ensure that the appliance door slides onto the hinges without any resistance.

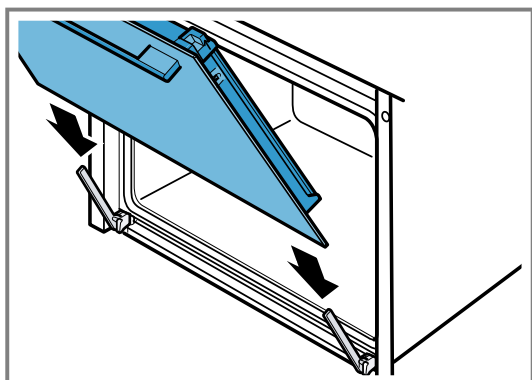


2. Use both hands to slide the appliance door on as far as it will go.

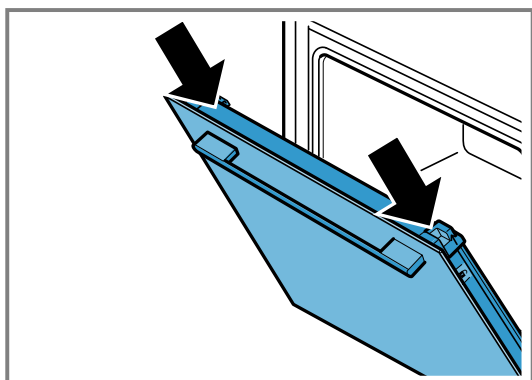

3. Open the appliance door fully.

4. Close the locking levers on the left- and right-hand hinges.

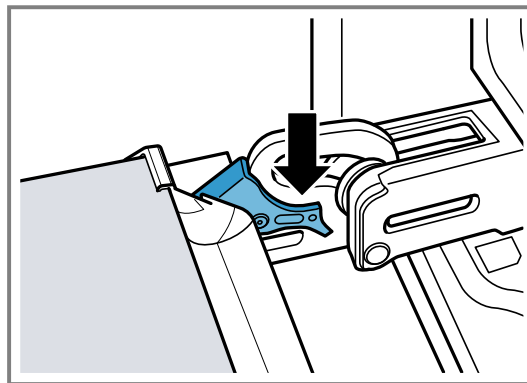

- ✓ The locking levers are closed. The appliance door is secured and cannot be detached.
5. Close the appliance door.

18.3 Removing the door panes


⚠ **WARNING – Risk of injury!**

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.


- Keep your hands away from the hinges.
- Components inside the appliance door may have sharp edges.
- Wear protective gloves.

Note: Depending on the appliance type, the appliance has a metal strip for opening.


1. Open the appliance door fully.
 2. Open the locking levers on the left- and right-hand hinges
- ✓ The locking levers are open. The hinges are now secured and cannot snap shut.
3. Close the appliance door fully.
 4. Press on the left- and right-hand pressure surface ① until it audibly clicks.

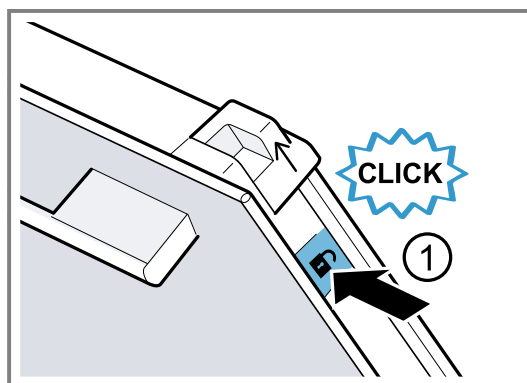


5. Push the two sliding caps upwards in the direction of the arrow ②.

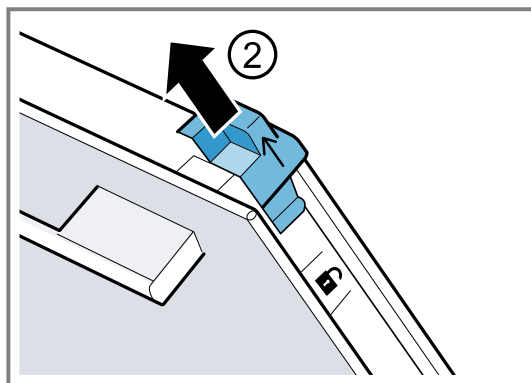

6. Remove the inner panel upwards at an angle and set it down carefully on a flat surface.
7. Depending on the appliance type, open the left- and right-hand metal strip in the direction of the arrow ①.

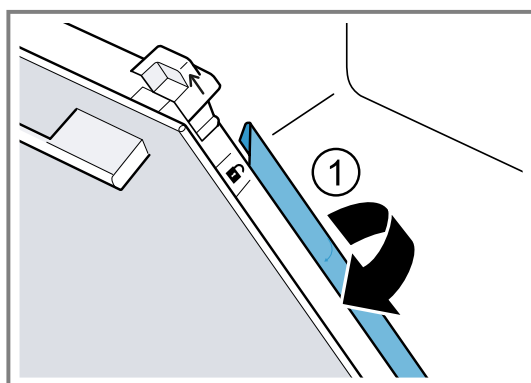

8. **ATTENTION** – Cleaning the glass panes in the dishwasher causes damage.
► Do not clean glass panes in the dishwasher.
Pull the first and second intermediate panels upwards and out at an angle, and set them down carefully on a flat surface.

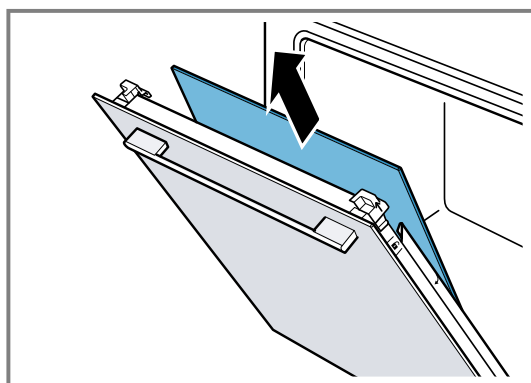

9. **⚠ WARNING – Risk of injury!**
Scratched glass in the appliance door may develop into a crack.

- Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

Clean the removed door panels on both sides with glass cleaner and a soft cloth.

10. Clean the appliance door.

11. Dry the door panels and refit them.

Note: While the cleaning function is running, the frame on the inside of the appliance door or other parts of the

door that are made of stainless steel become discoloured. This discolouration does not compromise the functionality of the appliance. The discolouration can be removed using a stainless steel cleaner.

18.4 Fitting the door panes

⚠ WARNING – Risk of injury!

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- Keep your hands away from the hinges.

Components inside the appliance door may have sharp edges.

- Wear protective gloves.

Note


Depending on the appliance type, the appliance has

- one metal strip for opening,
- or two different intermediate panels.


The intermediate panels are marked with a triangle symbol.


First, install the intermediate panel with an unfilled triangle \triangle , then the intermediate panel with a filled triangle \blacktriangle .

Ensure that the arrow is on the top left on the intermediate panels.

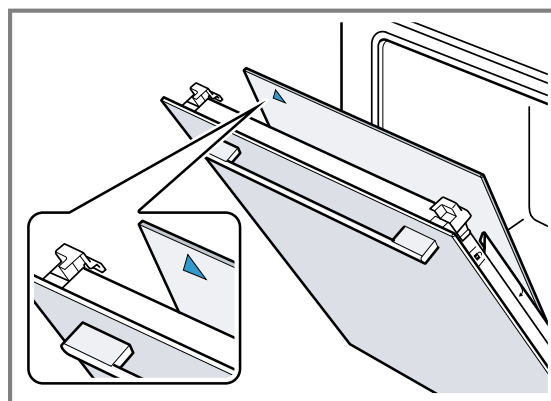



1. Slide the first intermediate panel into the lowest retainer ① and fit it at the top.

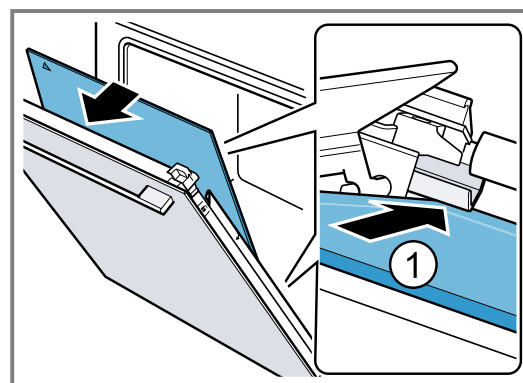

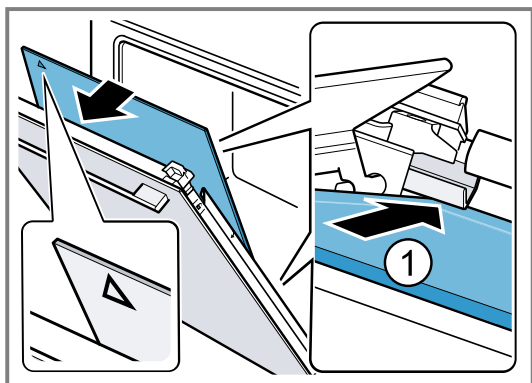


- ✓ The intermediate pane is automatically positioned by the rotational movement of the spacer.


2. Slide the second intermediate panel into the central retainer ① and fit it at the top.

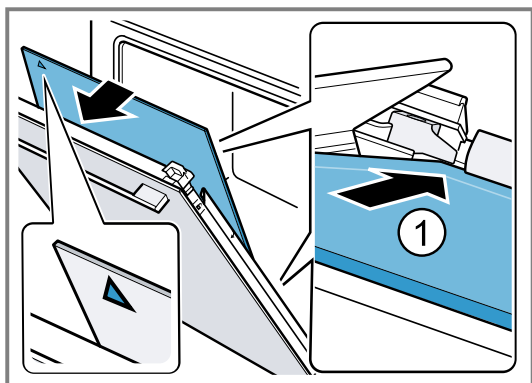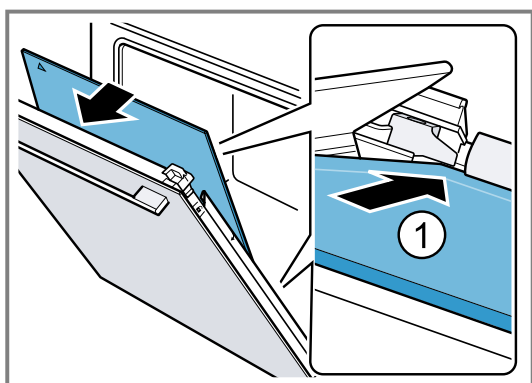

3. Depending on the appliance type, close the metal strip on the left and right. ①.

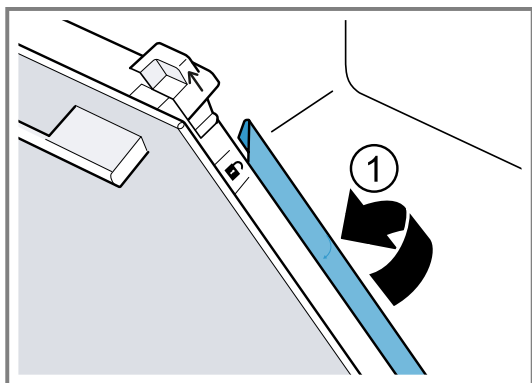


4. Slide the inner panel into the retainer at the bottom ① and fit it at the top.

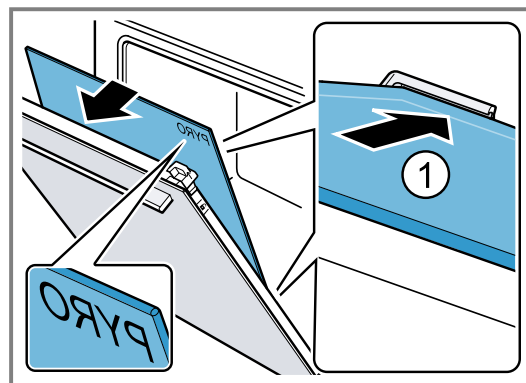


The lettering "Pyro" must be legible at the top, as shown in the picture.

5. Push the inner panel in at the top ①. Push the sliding caps a downwards in the direction of the arrow.

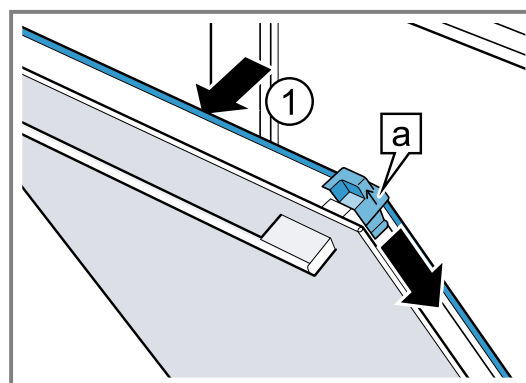

6. Open the appliance door fully.
7. Close the locking levers on the left- and right-hand hinges

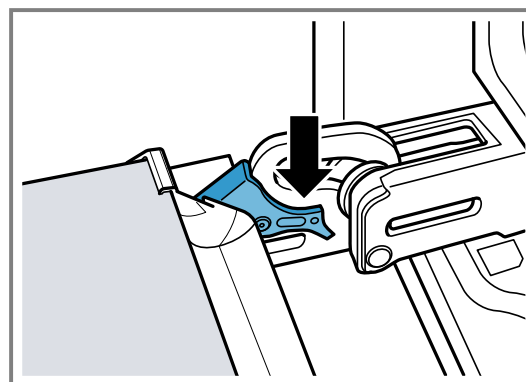

8. Close the appliance door.

Note: Do not use the cooking compartment again until the door panes have been correctly fitted.

19 Shelf supports

To clean the rails and the cooking compartment, or to replace the rails, you can remove these.


19.1 Detaching the shelf supports

⚠ WARNING – Risk of burns!

The shelf supports get very hot

- ▶ Never touch the shelf supports when hot.
- ▶ Always allow the appliance to cool down.
- ▶ Keep children at a safe distance.

1. Lift the rail forwards slightly ① and detach it ②.
2. Pull the whole rail to the front ③ and remove it.

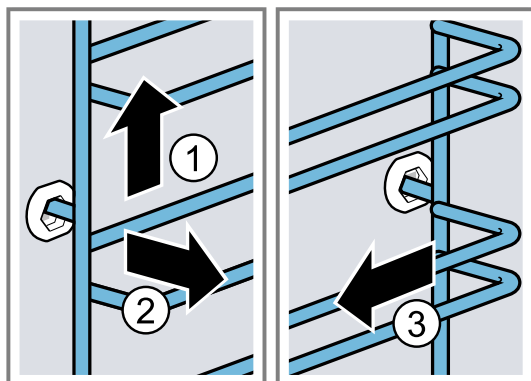


19.2 Attaching the shelf supports

Notes

- The rails only fit on the right or left.
- For both pull-out rails, ensure that you can pull them forwards and out.

1. First, push the rail into the middle of the rear socket ① until the rail rests against the cooking compartment wall, and then push this back ②.
2. Push the rail into the front socket ③ until the rail also rests against the cooking compartment wall, and then press this downwards ④.

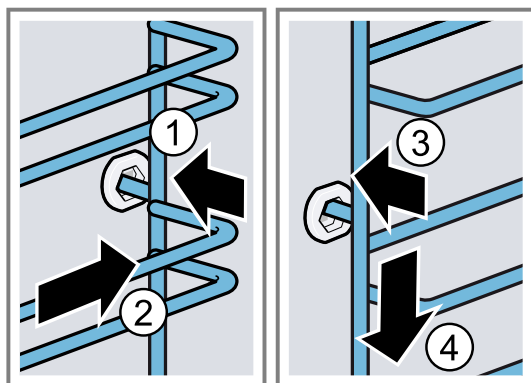

19.3 Removing the pull-out rail

⚠ WARNING – Risk of burns!


The shelf supports get very hot

- ▶ Never touch the shelf supports when hot.
- ▶ Always allow the appliance to cool down.
- ▶ Keep children at a safe distance.


Notes

- Depending on the appliance type, you must change the basic settings for the telescopic rails for appliances with rails and pull-out rails.
→ "Basic settings", Page 17
- If necessary, you can equip all levels with a pull-out rail.


1. Push on the tab marked **PUSH** behind the rail, and push the rail to the rear.

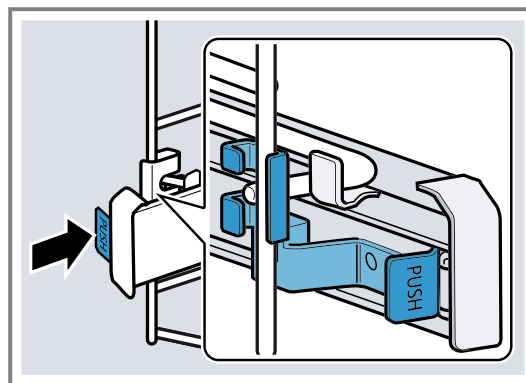


2. Keep the **PUSH** tab pushed back ① and swing the rail outwards ②.

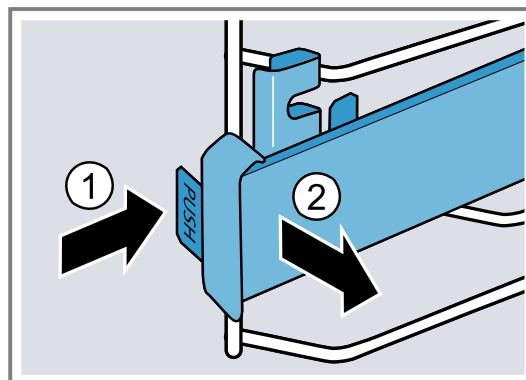

3. Pull the rail out towards the front until the retainer at the back unhooks.

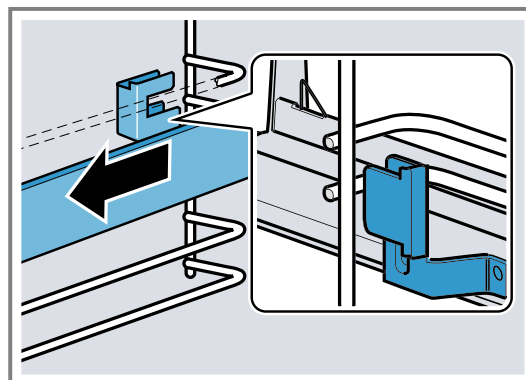

4. Remove the pull-out rail.

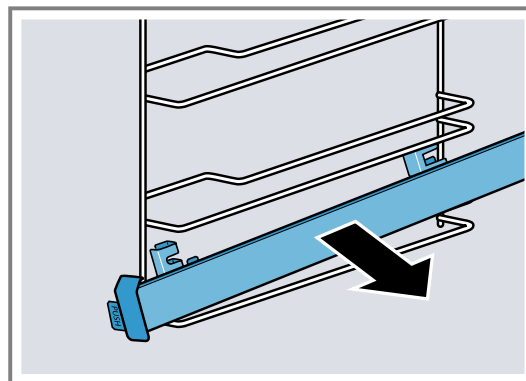


5. Clean the pull-out rail.
→ "Cleaning products", Page 18


19.4 Attaching the pull-out rail

Note: The pull-out rails only fit on the right or left. Make sure when you fit them that you can pull them out towards the front.

1. Insert the pull-out rail between the two bars.

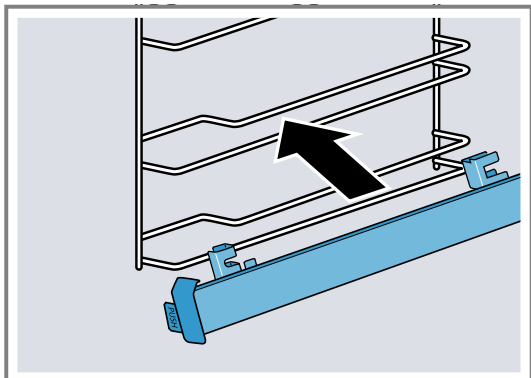


2. Push the retainer **a** in between the lower and the upper bar.

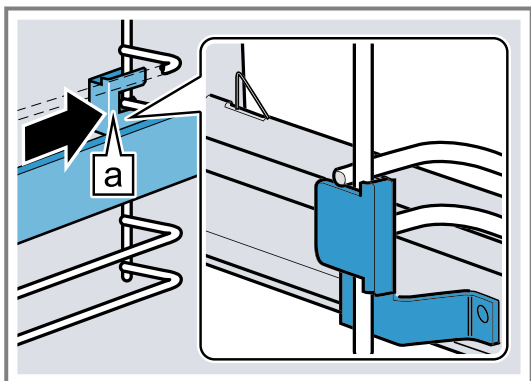


3. Keep the **PUSH** tab pushed in ① and swing the pull-out rail inwards until the front retainer **a** is located between the two bars ②.

- Release the **PUSH** tab.

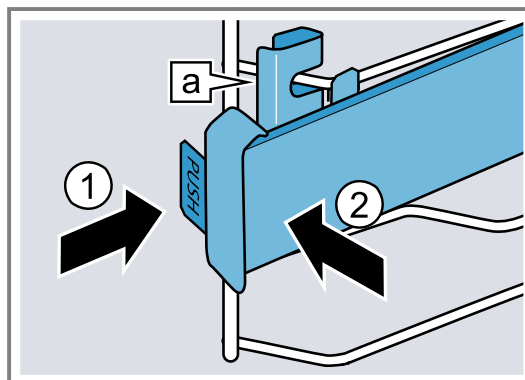

- ✓ The retainer **a** clicks into place.

4. Pull the pull-out rail out as far as it will go and slide it back in.

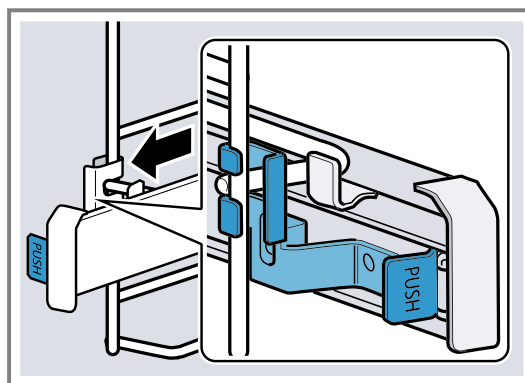

20 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

⚠ **WARNING – Risk of injury!**

Improper repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- If the appliance is defective, call Customer Service.
→ "Customer Service", Page 30




⚠ **WARNING – Risk of electric shock!**





Improper repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

20.1 Malfunctions

| Fault | Cause and troubleshooting |
|-------------------------------|--|
| The appliance is not working. | <p>The circuit breaker in the fuse box has tripped.</p> <ul style="list-style-type: none"> ► Check the circuit breaker in the fuse box. <p>There has been a power cut.</p> <ul style="list-style-type: none"> ► Check whether the lighting in your room or other appliances are working. |

| Fault | Cause and troubleshooting |
|--|---|
| The appliance is not working. | <p>Electronics fault</p> <ol style="list-style-type: none"> 1. Disconnect the appliance from the power supply for at least 30 seconds by switching off the fuse. 2. Reset the basic settings to the factory settings. → <i>"Basic settings", Page 17</i> |
| The time flashes in the display. | <p>There has been a power cut.</p> <ul style="list-style-type: none"> ▶ Reset the time. → <i>"Setting the time on the clock", Page 13</i> |
| Appliance is not heating; the colon flashes in the display. | <p>Demo mode is activated.</p> <ol style="list-style-type: none"> 1. Briefly disconnect the appliance from the power supply by switching the circuit breaker in the fuse box off and then on again. 2. Deactivate demo mode within five minutes by changing the basic setting c d to 0. → <i>"Basic settings", Page 17</i> |
| Steam-assisted operation does not start. | <p>The water tank is empty.</p> <ul style="list-style-type: none"> ▶ Fill the water tank. → <i>"Filling the water tank", Page 13</i> |
| The appliance door cannot be opened; ∞ lights up in the display. | <p>The childproof lock locks the appliance door.</p> <ul style="list-style-type: none"> ▶ Use the  button to deactivate the childproof lock. → <i>"Childproof lock", Page 17</i> |
| The appliance door cannot be opened; ⏻ lights up in the display. | <p>The cleaning function locks the appliance door.</p> <ul style="list-style-type: none"> ▶ Allow the appliance to cool down until ⏻ goes out in the display. → <i>"Pyrolytic self-cleaning", Page 20</i> |
| ∞ lights up on the display and no settings can be made on the appliance. | <p>Childproof lock is activated.</p> <ul style="list-style-type: none"> ▶ Use the  button to deactivate the childproof lock. → <i>"Childproof lock", Page 17</i> |
| h flashes in the display and the appliance will not start. | <p>The cooking compartment is too hot for the selected operation.</p> <ol style="list-style-type: none"> 1. Switch off the appliance and allow it to cool down. 2. Restart the operation. |
| F B appears in the display. | <p>The maximum cooking time has been reached. To prevent an unwanted permanent operation, the appliance automatically stops heating after several hours if the settings are unchanged.</p> <ul style="list-style-type: none"> ▶ Switch off the appliance. You can configure new settings if required. <p>Tip: To prevent the appliance from switching off when you do not want it to, e.g. for an extremely long preparation time, set a cooking time. → <i>"Time-setting options", Page 12</i></p> |
| A message with E appears in the display, e.g. E05-32. | <p>Electronics fault</p> <ol style="list-style-type: none"> 1. Press the  button. <ul style="list-style-type: none"> ▶ If required, reset the time. ✓ If the fault was a one-off, the error message disappears. 2. If the error message appears again, call the after-sales service. Quote the exact error message and the E no. of your appliance. → <i>"Customer Service", Page 30</i> |
| E 5 1-22 appears in the display. | <p>There is too much water in the steam system. The water cannot be pumped back into the water tank.</p> <ol style="list-style-type: none"> 1. Empty the water tank and insert the empty water tank. → <i>"Emptying the water tank", Page 14</i> 2. Reset the time. → <i>"Setting the time on the clock", Page 13</i> 3. Run "Descaling interrupted" in full. → <i>"Descaling interrupted", Page 22</i> |
| ⏻ lights up permanently on the display. | <p>The water tank is empty.</p> <ul style="list-style-type: none"> ▶ Fill the water tank. → <i>"Filling the water tank", Page 13</i> <hr/> <p>The water tank has not been put in fully.</p> <ul style="list-style-type: none"> ▶ Slide the water tank back in fully. <hr/> <p>The water tank is leaking.</p> <ul style="list-style-type: none"> ▶ Order a new water tank. |

| Fault | Cause and troubleshooting |
|---|---|
|  lights up permanently on the display. | The sensor is defective. ▶ Call . → "Customer Service", Page 30 |
|  lights up on the display. | Build-up of limescale in the appliance. ▶ Run the descaling programme in full. → "Descaling", Page 21 |
|  appears in the display. | The power supply has been disconnected or the appliance has been switched off during the descaling process. ▶ Run "Descaling interrupted" in full. → "Descaling interrupted", Page 22 |
| The appliance hums during operation and after it is switched off. | Functional test of the pump creates operating noise. No action required. |
| During operation with steam assistance, steam escapes from the ventilation slots. | Steam escapes for physical reasons. ▶ Wait until the cooking with steam assistance ends. After the end of cooking with steam assistance, no more steam will escape after a short time. |
| The cooking result is not satisfactory. | Settings were unsuitable. Adjustment values, e.g. temperature or cooking time, depend on the recipe, quantity and food. ▶ Next time, set lower or higher values.  |
| The result of the cleaning function is not satisfactory. | The cooking compartment was too dirty. ▶ Remove coarse dirt from the cooking compartment before using the cleaning function. ▶ Pay attention to the cleaning and care of your appliance. → "Cleaning and servicing", Page 18 |

20.2 Replacing the oven light bulb

If the light in the cooking compartment fails, change the oven light bulb.

Note: Heat-resistant, 40 - 43-watt, 230 V halogen bulbs are available from the after-sales service or specialist retailers. Only use these bulbs. Hold the new halogen bulbs only with a clean, dry towel. This increases the service life of the bulb.

WARNING – Risk of burns!

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

WARNING – Risk of electric shock!

When changing the bulb, the bulb socket contacts are live.

- ▶ Before replacing the bulb, ensure that the appliance is switched off in order to prevent a potential electric shock.
- ▶ Also unplug the appliance from the mains or switch off the fuse in the fuse box.


WARNING – Risk of injury!

The glass cover may already have broken due to external influences or it may break due to excessive pressure when being installed or removed.

- ▶ Exercise caution when installing or removing the glass cover.
- ▶ Use gloves or a tea towel.

Requirements

- The appliance is disconnected from the power supply.
 - The cooking compartment has cooled down.
 - You must have a new halogen lamp to replace the old one.
1. Place a tea towel in the cooking compartment to prevent damage.
 2. Turn the glass cover anti-clockwise to remove it ①.
 3. Pull out the halogen bulb without turning it ②.

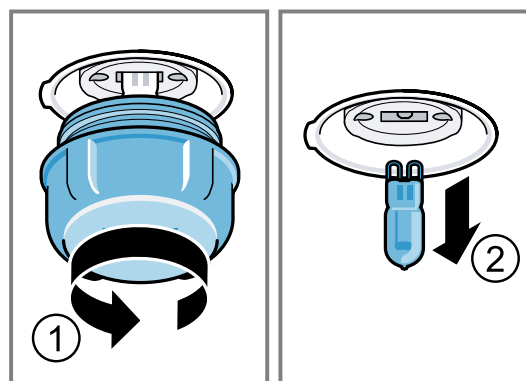

4. Insert the new halogen bulb and press it firmly into the socket.
Make sure that the pins are positioned correctly.
5. Depending on the appliance model, the glass cover may have a sealing ring. Attach the sealing ring.

6. Screw in the glass cover.
7. Remove the tea towel from the cooking compartment.
8. Connect the appliance to the power supply.

21 Disposal

21.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.
Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

22 Customer Service

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website. This product contains light sources from energy efficiency class G.

You can find the information required as per Regulations (EU) 65/2014, (EU) 66/2014 and (EU) 2023/826 online at www.bosch-home.com on the product and ser-

vice pages for your appliance, in the area of user manuals and additional documents.

22.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate. You will see the rating plate with these numbers if you open the appliance door.



Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

23 How it works

Here, you can find the ideal settings for various types of food as well as the best accessories and cookware. We have perfectly tailored these recommendations to your appliance.

23.1 General cooking tips

Take note of the following information when cooking all types of food.

- The temperature and cooking time depend on the amount of food and the recipe. Settings ranges are specified for this reason. Try using the lower values to start with.
- The setting values apply to food placed in the cooking compartment while the cooking compartment is still cold. If you want to preheat anyway, do not place accessories into the cooking compartment until it has finished preheating.

- Remove any accessories that are not being used from the cooking compartment.

ATTENTION

Acidic food may damage the wire rack

- Do not place acidic food, such as fruit or food with an acidic marinade directly on the wire rack.

Information for those allergic to nickel

In rare cases, small amounts of nickel may pass into the food.

You can buy suitable accessories from customer service, from specialist retailers or online.

→ "Other accessories", Page 10

23.2 Notes on baking

When baking, use the shelf positions indicated.

| Baking on one level | Height |
|--|--------|
| Deep baked goods or tin on wire rack | 2 |
| Flat baked goods or goods in a baking tray | 3 |

| Baking on two levels | Height |
|----------------------|--------|
| Universal pan | 3 |
| Baking tray | 1 |

| Baking tins on the wire rack: | Height |
|-------------------------------|--------|
| First wire rack | 3 |
| Second wire rack | 1 |

| Baking on three levels | Height |
|------------------------|--------|
| Baking tray | 5 |
| Universal pan | 3 |
| Baking tray | 1 |

Notes

- When baking on several layers, use hot air. Baked goods that are placed in the oven at the same time will not necessarily be ready at the same time.
- Place dishes next to each other or offset one above the other in the cooking chamber.
- For best results, we recommend using dark-coloured metal baking tins.
- Steam-assisted baking is only possible on one level.

23.3 Notes on roasting and grilling

The setting values are based on the assumption that unstuffed, chilled, ready-to-roast poultry, meat or fish is placed into a cold cooking compartment.

- The larger the poultry, meat or fish, the lower the cooking temperature and the longer the cooking time.
- Turn the poultry, meat or fish after approx. 1/2 to 2/3 of the time listed.
- When you turn poultry, ensure that the breast side or skin side is underneath to begin with.




Steam-assisted roasting and braising

- Dishes with steam-assisted cooking and a long cooking time may empty the water tank. If necessary, refill the water tank.
- You do not need to turn the meat or fish.

Roasting and grilling on the wire rack

Roasting on the wire rack works particularly well for large poultry or for multiple pieces at the same time.

Recommended settings for various types of food

| Food | Accessory/cookware | Height | Type of heating | Temperature in °C/grill setting | Cooking time in mins |
|---|-----------------------------|--------|---|---------------------------------|----------------------|
| Sponge cake, simple | Ring-shaped tin or Loaf tin | 2 |  | 150-170 | 50-70 |
| Sponge cake, simple | Ring-shaped tin or Loaf tin | 2 |  | 150-160 | 70-90 |
| Sponge cake, delicate (spring-form tin) | Ring-shaped tin or Loaf tin | 2 |  | 150-170 | 60-80 |

- Depending on the size and type of the food to be roasted, add up to 1/2 litre water to the universal pan. You can make a sauce from the juices that are collected. This also means that less smoke is produced and the cooking compartment does not become as dirty.
- Keep the appliance door closed when using the grill. Never grill with the appliance door open.
- Place the food to be grilled on the wire rack. In addition, slide the universal pan in at least one shelf position lower, with the slanted edge facing the appliance door. This means that any dripping fat is caught.

Roasting in cookware

When preparing food in cookware with a lid, the cooking compartment remains cleaner.

Follow the manufacturer's instructions for your roasting dishes. Glass cookware is best.

Cookware without lid

- Use a deep roasting dish.
- Place the cookware onto the wire rack.
- If you do not have any suitable cookware, use the universal pan.

Cookware with lid

- Place the cookware onto the wire rack.
- Meat, poultry and fish can also become crispy in a covered roasting dish. Use a roasting dish with a glass lid. Set a higher temperature.

WARNING – Risk of injury!

If hot glass cookware is placed on a wet or cold surface, the glass may shatter.

- Place hot glass ovenware on a dry mat after cooking.
































WARNING – Risk of scalding!

Very hot steam may escape when the lid is opened after cooking. Steam may not be visible, depending on the temperature.

- Lift the lid in such a way that the hot steam can escape away from you.
- Keep children away from the appliance.

23.4 List of foods

Recommended settings for a variety of foods, sorted into food categories.

| Food | Accessory/cookware | Height | Type of heating | Temperature in °C/grill setting | Cooking time in mins |
|--|--------------------------------------|--------|---|---|---|
| Cake, 2 levels | Ring-shaped tin or Loaf tin | 3+1 |  | 140-150 | 70-85 |
| Fruit tart or cheesecake with shortcrust pastry base | Springform cake tin, diameter 26 cm. | 2 |  | 170-190 | 55-80 |
| Yeast cake in springform tin | Springform cake tin Ø 28 cm | 2 |  | 160-170 | 25-35 |
| Fatless sponge cake, 6 eggs | Springform cake tin Ø 28 cm | 2 | 1.  2.  | 150-160 | 1. 15 2. 25-30 |
| Swiss roll | Universal pan | 3 |  | 170-180 | 15-20 |
| Shortcrust tart with moist topping | Universal pan | 2 |  | 160-180 | 55-95 |
| Yeast cake with moist topping | Universal pan | 3 |  | 180-200 | 30-55 |
| Muffins | Muffin tray | 2 |  | 170-190 | 20-40 |
| Small yeast cakes | Universal pan | 3 |  | 160-170 | 20-30 |
| Small yeast cakes | Universal pan | 3 |  | 160-170 | 25-45 |
| Biscuits | Universal pan | 3 |  | 140-160 | 15-25 |
| Biscuits, 2 levels | Universal pan + Baking tray | 3+1 |  | 140-160 | 15-25 |
| Biscuits, 3 levels | Universal pan + x 2 Baking tray | 5+3+1 |  | 140-160 | 15-25 |
| Meringues | Universal pan | 3 |  | 80-90 ¹ | 120-150 |
| Bread, 1000 g (in a loaf tin or free-form) | Universal pan or Loaf tin | 2 | 1.  2.  | 1. 210-220 2. 180-190 | 1. 15 2. 35-50 |
| Pizza, fresh, on a baking tray | Universal pan | 3 |  | 180-200 | 20-30 |
| Pizza, fresh, thin-crust, on a pizza tray | Pizza tray | 2 |  | 250-270 ¹ | 8-13 |
| Quiche | Tart dish or tin or Black tray | 2 |  | 190-210 | 25-35 |
| Börek | Universal pan | 1 |  | 180-200 | 40-50 |
| Bake, savoury, cooked ingredients | Ovenproof dish | 2 |  | 150-170 | 40-45 |
| Chicken, 1.3 kg, unstuffed | Uncovered cookware | 2 |  | 200-220 | 50-60 |
| Small chicken portions, 250 g each | Uncovered cookware | 2 |  | 210-220 | 30-40 |
| Goose, unstuffed, 3 kg | Wire rack | 2 | 1.  2.  3.  | 1. 140-150 2. 140-150 3. 180-190 | 1. 30-40 2. 70-80 3. 40-50 |
| Pork loin, lean, 1 kg | Flat glass dish | 2 |  | 180 | 90-120 |
| Joint of pork without rind, e.g. neck, 1.5 kg | Uncovered cookware | 2 |  | 160-170 | 130-150 |
| Joint of pork without rind, e.g. neck, 1.5 kg | Uncovered cookware | 2 |  | 190-200 | 120-150 |
| Fillet of beef, medium, 1 kg ² | Universal pan + Wire rack | 3 |  | 210-220 | 40-50 ³ |

¹ Preheat the appliance.² Slide the universal pan underneath the wire rack.³ Turn the dish between halfway and two-thirds through the cooking time.

| Food | Accessory/cookware | Height | Type of heating | Temperature in °C/grill setting | Cooking time in mins |
|--|--------------------|--------|-----------------|---------------------------------|----------------------|
| Pot-roasted beef, 1.5 kg ¹ | Covered cookware | 2 | | 200-220 | 130-150 |
| Sirloin, medium, 1.5 kg | Uncovered cookware | 2 | | 180-200 | 50-60 |
| Burger, 3–4 cm thick ² | Wire rack | 4 | | 3 | 25-30 ³ |
| Leg of lamb, boned, medium, 1.0 kg | Uncovered cookware | 2 | | 170-180 | 65-75 |
| Fish, grilled, whole, 300 g, e.g. trout ⁴ | Wire rack | 2 | | 160-180 | 20-30 |
| Fish, baked, whole, 300 g, e.g. trout | Universal pan | 2 | | 170-180 | 20-30 |
| Fish, braised, whole, 300 g, e.g. trout | Covered cookware | 2 | | 170-190 | 30-40 |
| Fish, braised, whole, 1.5 kg, e.g. salmon | Covered cookware | 2 | | 180-200 | 55-65 |

Desserts

Preparing yoghurt

1. Remove the accessories and shelf supports from the cooking compartment.
2. Pour the previously prepared yoghurt mixture into small containers, e.g. into cups or small jars.

3. Cover the containers with foil, e. g. with cling film.
4. Place the containers on the cooking compartment floor.
5. Set the appliance according to the recommended setting.
6. After making the yoghurt, leave it to cool in the refrigerator.

Recommended settings for desserts

| Food | Accessory/cookware | Height | Type of heating | Temperature in °C | Cooking time in mins |
|---------|--------------------|---------------------------|-----------------|-------------------|----------------------|
| Yoghurt | Individual moulds | Cooking compartment floor | | 40-45 | 8-9 hrs |

23.5 Special cooking methods and other applications

Information and recommended settings for special cooking methods and other applications, e.g. low-temperature cooking.

Air Fry

Cook food with Air Fry until crispy and with little fat. Air Fry is particularly suitable for meals that are normally fried in oil.

Cooking tips for Air Fry

Observe this information when cooking food with Air Fry.

- Only one level can be used when cooking with Air Fry.
- You can achieve the crispiest results using the enamelled Air Fry tray. The perforated surface enables extremely good air circulation around the food.

If the Air Fry tray is not included with the appliance as standard, you can obtain the Air Fry tray as an optional accessory.

- Do not preheat the oven.
- Do not use greaseproof paper. The air must circulate in the cooking compartment.
- Do not defrost frozen food.
- Cover the Air-Fry tray evenly with the food. If possible, only distribute the food on the accessory in a single layer.
- Insert the accessory into the cooking compartment at level 3. If you use the Air Fry tray, you can insert an empty universal pan at level 1 to protect against dirt.
- Turn the food halfway through cooking. If you are cooking larger quantities, turn the food twice.

Tip: Do not season the food until after you have cooked it. This makes the food crispier.

Breaded vegetables are also suitable for cooking with Air Fry. To save fat, use a sprayer to spray the coating with oil. This forms a crispy crust with little fat.







¹ At the start, add liquid to the cookware so that at least 2/3 of the joint is covered in liquid

² Slide the universal pan in underneath at shelf position 2.

³ Turn the dish 2/3 of the way through the cooking time.

⁴ Slide the universal pan underneath the wire rack.

Recommended settings for Air Fry

| Food | Accessory/cookware | Height | Type of heating | Temperature in °C | Cooking time in mins |
|----------------------------------|--------------------|--------|---|-------------------|----------------------|
| Chips, frozen | Air Fry tray | 3 |  | 170-190 | 20-25 |
| Potato pockets, filled, frozen | Air Fry tray | 3 |  | 170-190 | 20-25 |
| Potato rösti, frozen | Air Fry tray | 3 |  | 170-190 | 20-25 |
| Chicken goujons, nuggets, frozen | Air Fry tray | 3 |  | 170-190 | 10-15 |
| Fish fingers, frozen | Air Fry tray | 3 |  | 170-190 | 15-20 |
| Broccoli, breaded | Air Fry tray | 3 |  | 170-190 | 15-25 |

Reheating

Gently warm up food with added steam. The food tastes and looks as though it has been freshly cooked.

Tip: Plated meals and pizza can be reheated in this appliance using the corresponding automatic programme.
→ "Programme table", Page 15










Tips for reheating food

- Use uncovered, heat-resistant cookware that is suitable for cooking with steam.
- Use wide, shallow cookware. Cold cookware extends the reheating time.
- Place the cookware on the wire rack.
- Place food that you have not prepared in cookware directly onto the wire rack at level 2.
- Do not cover the food.
- Do not open the cooking compartment door while the food is being reheated, otherwise large amounts of steam will escape.
- Wipe the cooking compartment and dry the drip trough after using it to reheat food.

23.6 Test dishes

The information in this section is provided for test institutes to facilitate testing of the appliance in accordance with EN 60350-1.

Recommended settings for baking

| Food | Accessory/cookware | Height | Type of heating | Temperature in °C | Cooking time in mins |
|---------------------------|--|--------|---|----------------------|----------------------|
| Shortbread | Universal pan | 3 |  | 140-150 ¹ | 25-35 |
| Shortbread | Universal pan | 3 |  | 140 ¹ | 28-38 |
| Viennese whirls, 2 levels | Universal pan + Baking tray | 3+1 |  | 140 ¹ | 30-40 |
| Viennese whirls, 3 levels | Universal pan + x 2 Baking tray | 5+3+1 |  | 130-140 ¹ | 35-55 |
| Small Cakes | Universal pan | 3 |  | 150 ¹ | 25-35 |
| Small Cakes | Universal pan | 3 |  | 150 ¹ | 20-30 |
| Small Cakes | Universal pan | 3 |  | 170 | 20-30 |
| Small Cakes, 2 levels | Universal pan + Baking tray | 3+1 |  | 150 ¹ | 25-35 |
| Small Cakes, 3 levels | Universal pan | 5+3+1 |  | 140 ¹ | 30-40 |

¹ Preheat the appliance for five minutes. Do not use the rapid heating function.

Baking

- The setting values apply to food that is placed into a cold cooking compartment.
- Take note of the information on preheating in the recommended settings tables. These setting values apply without rapid heat-up.
- For baking, use the lower of the temperatures indicated first.
- Items that are placed in the appliance on baking trays or in baking tins/dishes at the same time will not necessarily be ready at the same time.
- Shelf positions when baking on 2 levels:
 - Universal pan: Shelf position 3
 - Baking tray: Shelf position 1
 - Baking tins on the wire rack:
 - First wire rack: Shelf position 3
 - Second wire rack: Shelf position 1
- Shelf positions when baking on 3 levels:
 - Baking tray: Shelf position 5
 - Universal pan: Shelf position 3
 - Baking tray: Shelf position 1
- Hot water sponge cake
 - When baking on 2 levels, place the springform tins each in the centre of the wire racks.
 - As an alternative to a pan support, you can also use the Air Fry baking tray offered by us.

| Food | Accessory/cookware | Height | Type of heating | Temperature in °C | Cooking time in mins |
|---------------------------------|--------------------------------------|--------|------------------------|----------------------|---------------------------------|
| | + x 2 Baking tray | | | | |
| Hot water sponge cake | Springform cake tin, diameter 26 cm. | 2 | | 160-170 ¹ | 25-35 |
| Hot water sponge cake | Springform cake tin, diameter 26 cm. | 2 | 1. 2. | 150-160 | 1. 10 2. 20-25 |
| Hot water sponge cake | Springform cake tin, diameter 26 cm. | 2 | | 160-170 | 30-40 |
| Hot water sponge cake, 2 levels | Springform cake tin, diameter 26 cm. | 3+1 | | 150-160 ¹ | 35-50 |
| Apple Pie, 2 x | x 2 20 cm springform cake tin | 2 | | 180-190 | 75-90 |

Grilling

Recommended settings for grilling

| Food | Accessory/cookware | Height | Type of heating | Temperature in °C/grill setting | Cooking time in mins |
|----------------|--------------------|--------|-----------------|---------------------------------|----------------------|
| Toasting bread | Wire rack | 5 | | 3 ² | 5-6 |

24 Installation instructions

Observe this information when installing the appliance.



mm


24.1 General installation instructions


Follow these instructions before you start installing the appliance.

- The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer shall be liable for damages incurred as a result of incorrect installation.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
- Before starting up the appliance, remove any packaging material and adhesive film from the cooking compartment and the door.
- Proceed in accordance with the installation sheets for installing accessories.
- Fitted units must be heat-resistant up to 95 °C, and adjacent unit fronts up to 70 °C.
- Do not install the appliance behind a decorative door or the door of a kitchen unit. There is a risk of overheating.
- Cut-out work on the units should be carried out before installing the appliance. Remove any shavings. Otherwise, the correct operation of electrical components may be adversely affected.
- Position the appliance on a horizontal surface.
- The mains socket for the appliance must either be located in the hatched area or outside of the area where the appliance is installed.

¹ Preheat the appliance. Do not use the rapid heating function.

² Do not preheat the appliance.

1 Any unsecured units must be secured to the 0.wall using a standard bracket .

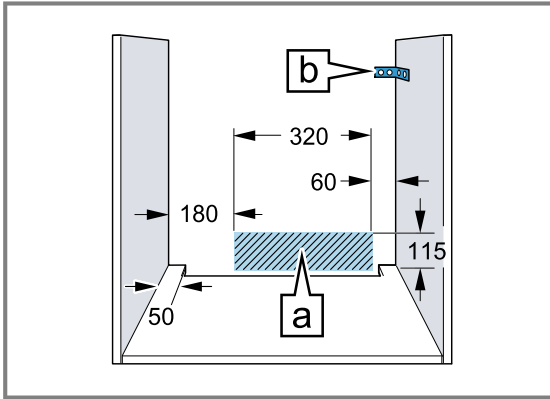

- Wear protective gloves so that you do not cut yourself. Parts that are accessible during installation may have sharp edges.
- Dimensions of the figures in mm.

⚠ WARNING – Risk of electric shock!

Once the appliance has been installed, the openings in the back panel of the appliance must not be accessible to children, not even through the drawers and kitchen cabinets underneath. This must be ensured through the installation. In the case of an island unit, a closed back panel is required.

⚠ WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.


ATTENTION

Carrying the appliance by the door handle could break it. The door handle cannot support the weight of the appliance.

- ▶ Do not carry or hold the appliance by the door handle.


24.2 Appliance dimensions

You will find the dimensions of the appliance here

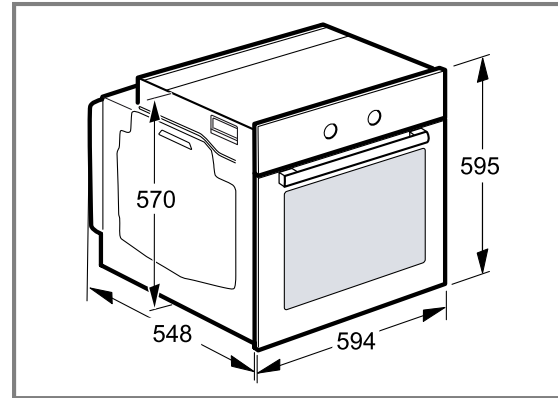

24.3 Installation below a worktop


Observe the installation dimensions and the installation instructions when installing below a worktop.

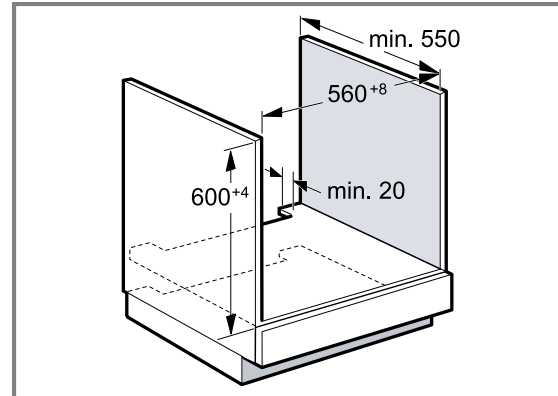

- To ventilate the appliance, the intermediate floor must have a ventilation cut-out.
- In combination with induction hobs, the gap between the worktop and appliance must not be sealed using additional strips.
- The worktop must be secured to the fitted unit.
- Observe any available installation instructions for the hob.
- Observe different national installation instructions for the hob.
- Observe the worktop depth of min. 600 mm.
- When installing under a gas hob, ensure that the appliance does not come into contact with the gas connection of the gas hob.
- If necessary, call a qualified specialist for gas installation.

24.4 Installation in a tall unit


Observe the installation dimensions and the installation instructions when installing in a tall unit.

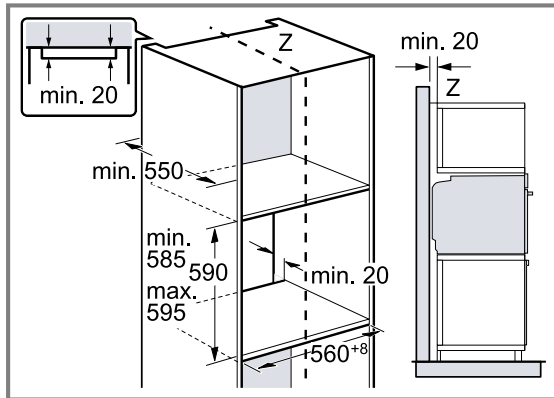


- To ventilate the appliance, the intermediate floors must have a ventilation cut-out.
- Only fit the appliance up to a height which allows accessories to be easily removed.

24.5 Installing two appliances on top of each other

Your appliance can also be installed above or below another appliance. Observe the installation dimensions and the installation instructions when installing appliances on top of each other.

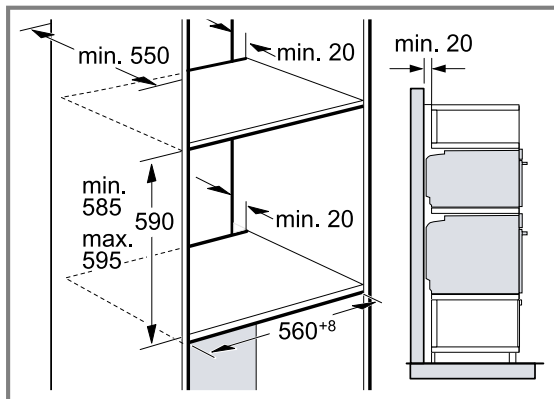


- To ventilate the appliances, the intermediate floor must have a ventilation cut-out.
- To ensure sufficient ventilation of the two appliances, there must be a ventilation opening of at least 200 cm² in the base area. To do this, trim the base panel or fit a ventilation grille.
- Ensure that air exchange is guaranteed in accordance with the diagram.

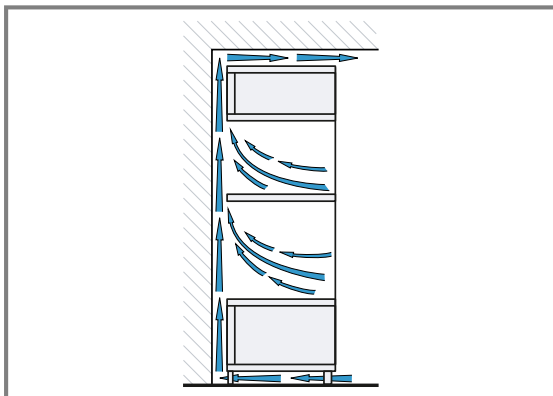

- Only fit appliances up to a height that allows accessories to be easily removed.

24.6 Corner installation

Observe the installation dimensions and the installation instructions when installing in a corner.

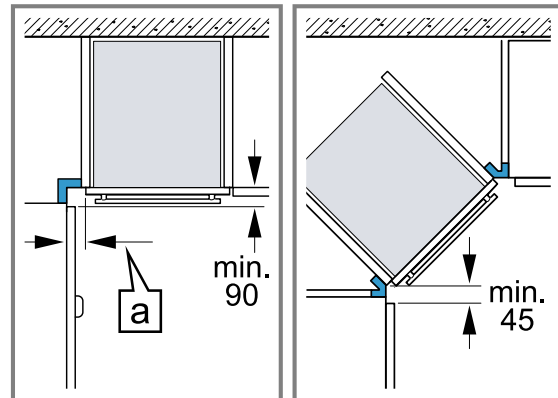


- To ensure that the appliance door can be opened, you must take the minimum dimensions into consideration when installing in a corner. The dimension a is dependent on the thickness of the unit front and the handle.

24.7 Electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

- The appliance corresponds to protection class I and must only be operated with a protective earth connection.
- The fuse protection must correspond to the power rating specified on the appliance's rating plate and to the local regulations.
- The appliance must be disconnected from the power supply whenever installation work is being carried out.
- The appliance must only be connected using the power cable provided.
- The power cable must be plugged in at the rear of the appliance until you hear a clicking sound. A 3 m power cable can be obtained from customer service.

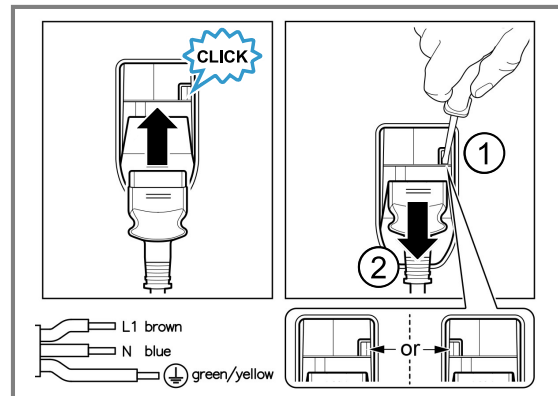

- The power cable must only be replaced with a cable from the original manufacturer. This is available from after-sales service.
- Contact protection must be guaranteed by the installation.

Electrically connect the appliance with the protective contact plug

Note: The appliance must only be connected to a protective contact socket that has been correctly installed.

- ▶ Insert the plug into the protective contact socket.
When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.


Electrically connecting an appliance without a protective contact plug

Note: Only licensed specialists may connect the appliance. Damage caused by incorrect connection is not covered under the warranty. An isolating switch must be integrated into the permanent electrical installation according to the installation regulations.


1. Identify the phase and neutral conductors in the socket.
The appliance may be damaged if it is not connected correctly.
2. Connect the hob in accordance with the connection diagram.
See the rating plate for the voltage.
3. Connect the wires of the mains power cable according to the colour coding:
 - ▶ Green/yellow = Protective conductor ⊕
 - ▶ Blue = Neutral conductor
 - ▶ Brown = Phase (external conductor)

24.8 Installing the appliance

1. Slide the appliance in fully and centre it.

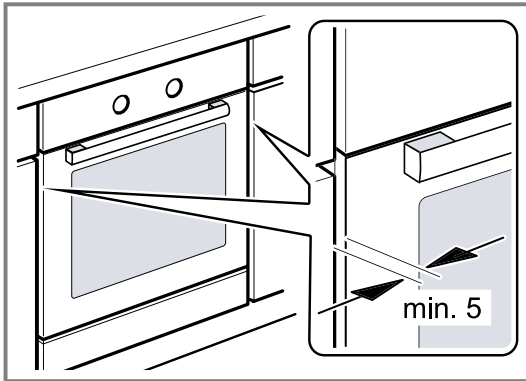


2. Screw the appliance into place.

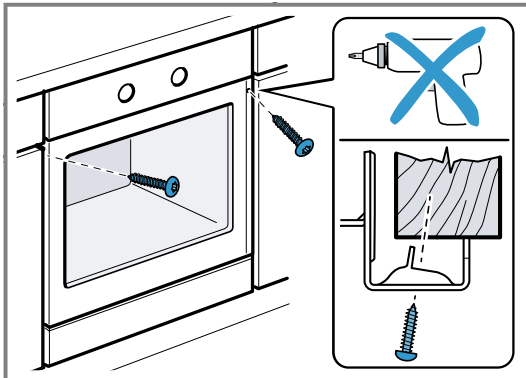


Note: The gap between the worktop and the appliance must not be closed by additional battens. Thermal insulation strips must not be fitted to the side panels of the surround unit.

24.9 For handleless kitchens with vertical bar handle strips:


1. Attach a suitable filling piece on both sides in order to cover any sharp edges and to guarantee safe installation.

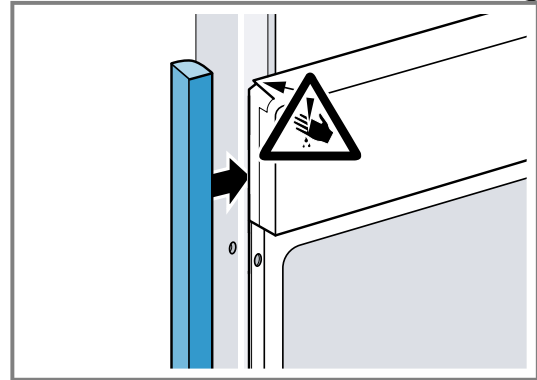

2. Secure the filling piece to the unit.
3. Pre-drill the filling piece and the unit to establish a screw connection.

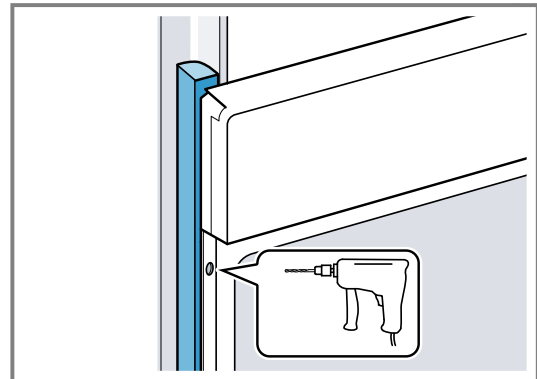

4. Secure the appliance using a suitable screw.

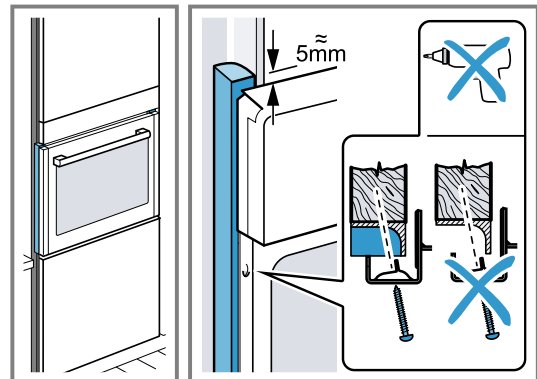

24.10 Removing the appliance

1. Disconnect the appliance from the power supply.
2. Undo the fastening screws.
3. Lift the appliance slightly and pull it out completely.



A series of horizontal lines for writing, starting from the top right of the page and extending downwards to the bottom of the page.



Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- **Expert tips & tricks for your appliance**
- **Warranty extension options**
- **Discounts for accessories & spare-parts**
- **Digital manual and all appliance data at hand**
- **Easy access to Bosch Home Appliances Service**

Free and easy registration – also on mobile phones:
www.bosch-home.com/welcome

BOSCH
HOME APPLIANCES
SERVICE

Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems
or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

BSH Hausgeräte GmbH

Carl-Wery-Straße 34
81739 München, GERMANY
www.bosch-home.com

A Bosch Company

Valid within Great Britain:
Imported to Great Britain by
BSH Home Appliances Ltd.
Grand Union House
Old Wolverton Road
Wolverton, Milton Keynes
MK12 5PT
United Kingdom



9002009687 (050527) REG25

en